

**Marantec**

**bi·linked**

**Radio Accessories**

# Impressions transmitters



# Impressions wall controls



**Simple encoding**  
(e. g. Multi-Bit)




**Complex encoding**  
(e. g. bi·linked)




## uni-directional



## bi-directional

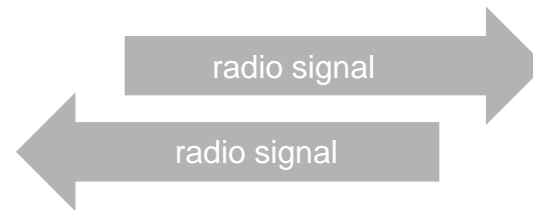

### Hand transmitter bi-directional

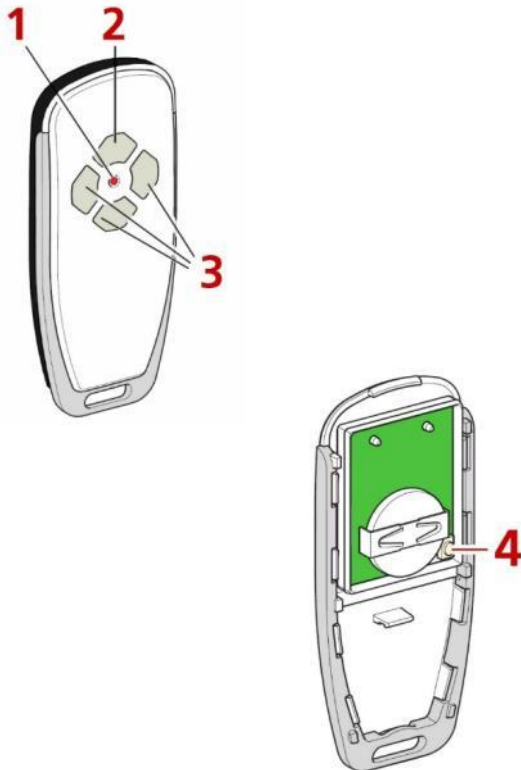


### Functions (3-channel transmitter)

- › Impulse
- › Direction orders
- › Door position request
- › Travel direction signalling
- › Button lock

### Caption

- 1 LED indicator
- 2 Status button
- 3 Function buttons
- 4 Programming button

### Hand transmitter uni-directional

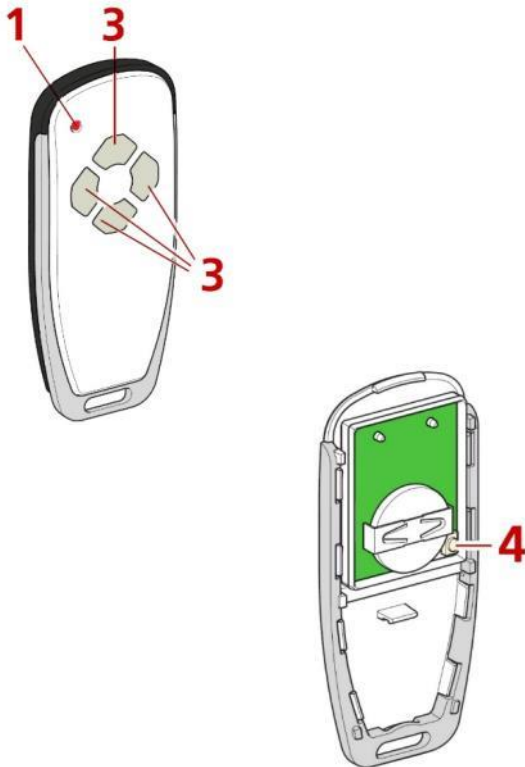

### Functions (4-channel transmitter)

- > Impulse
- > Direction orders
- > Button lock

### Caption

- 1 LED indicator
- 3 Function buttons
- 4 Programming button


## Radio push button with status request bi-directional

### Functions

- › Impulse
- › Direction orders
- › Door position request
- › Travel direction signalling
- › Holiday mode
- › Conventional cabling external push button (both channels)


### Caption

- 1 LED indicator
- 2 Status button
- 3/4 Function buttons
- 7 Holiday button
- 8 Programming button

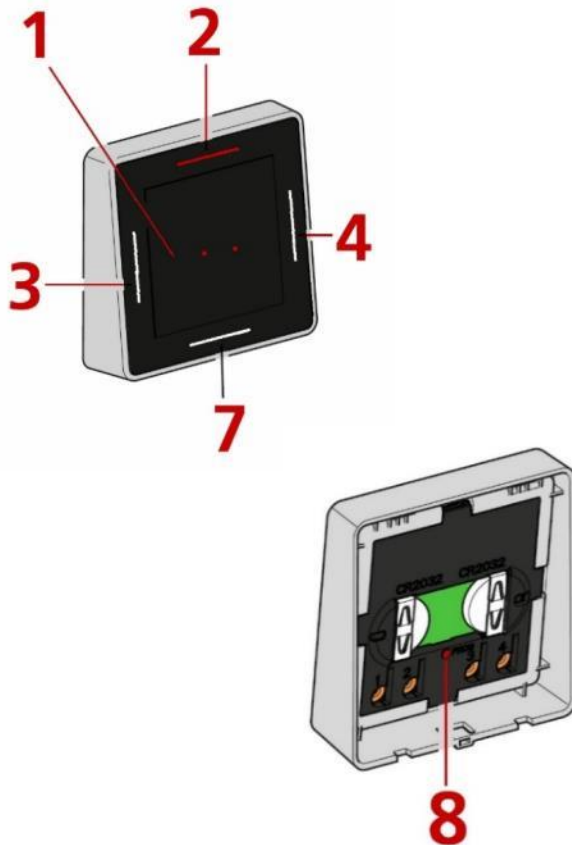



## Radio push button with motion detector bi-directional

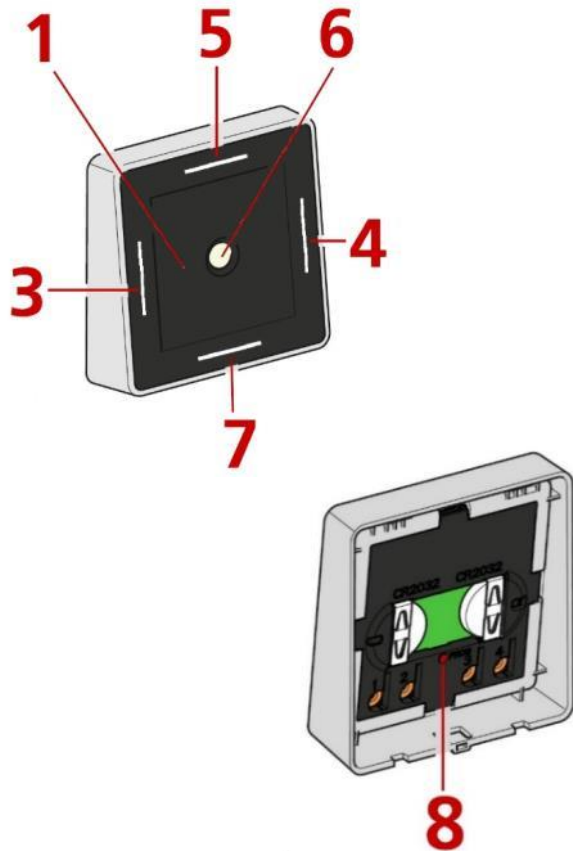



### Functions

- › Impulse
- › Direction orders
- › Light switching by motion detector
- › Holiday mode
- › Conventional cabling external push button (both channels)

### Caption

- 1 LED indicators
- 3/4 Function buttons
- 5 Light button
- 6 Motion detector
- 7 Holiday button
- 8 Programming button

## Radio code keypad uni-directional

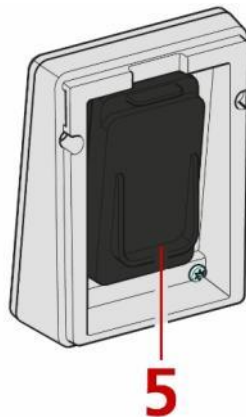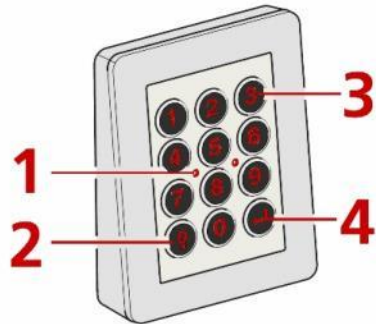

### Functions

- › Impulse
- › 3 user codes
- › 1 master code
- › Temporary code (3 times usable)
- › Light control
- › Reset function

### Caption

- 1 LED indicators
- 2 Light button
- 3 Digit buttons
- 4 Enter button
- 5 Battery compartment cover

 
### Radio fingerprint reader uni-directional



### Functions

- › 20 user fingers for operation
- › 2 channels
- › Deleting of single or all user fingers
- › Reset

## Radio fingerprint reader uni-directional

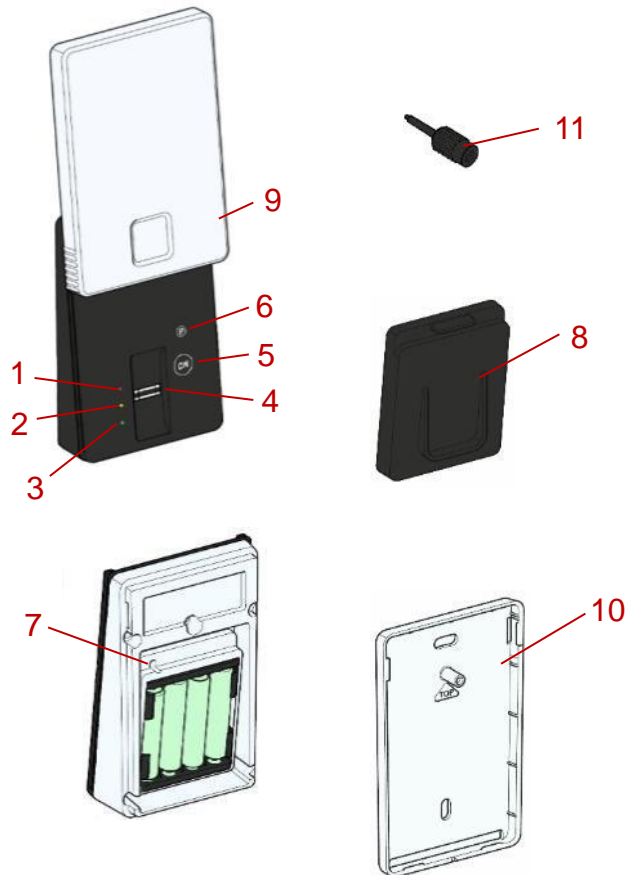


### Caption



- 1 LED indicator red
- 2 LED indicator yellow
- 3 LED indicator green
- 4 Reader module
- 5 Power button (ON)
- 6 Front programming button
- 7 Rear programming button
- 8 Battery compartment cover
- 9 Sliding cover
- 10 Wall mounting
- 11 Programming pin for the rear programming button

# Programming & Operation

 
Radio programming

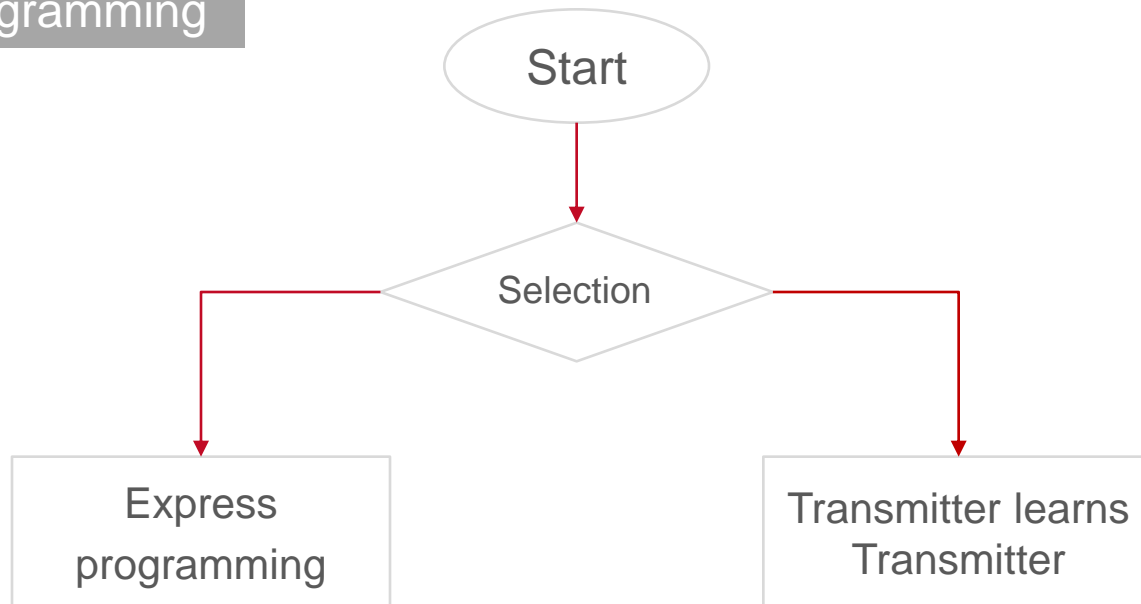

Radio | Express programming

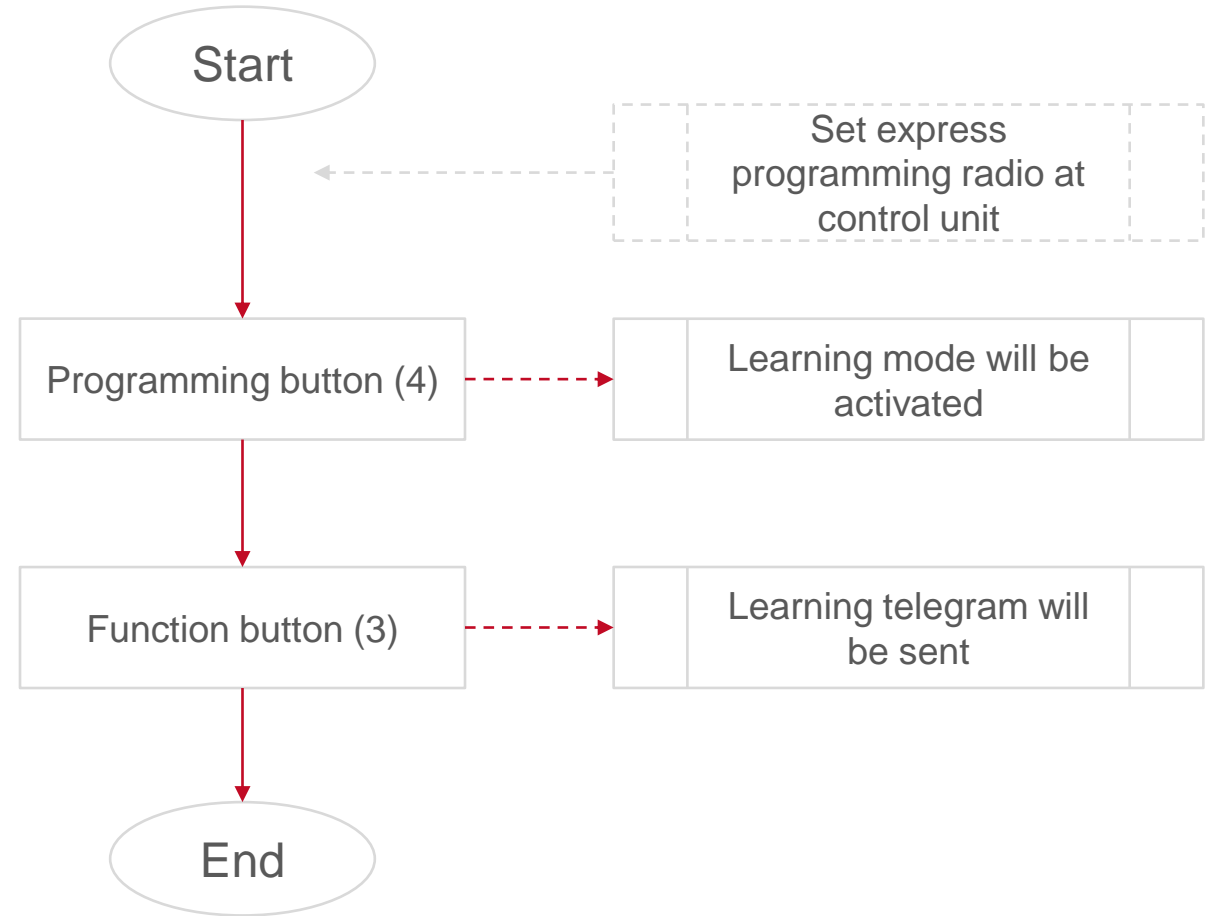 
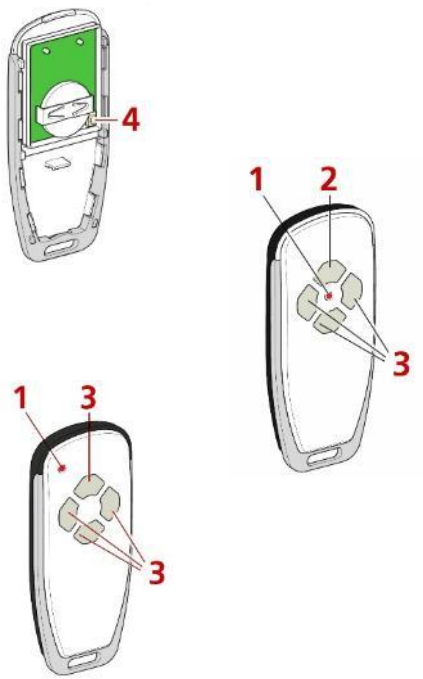


Radio | Transmitter learns  
Transmitter

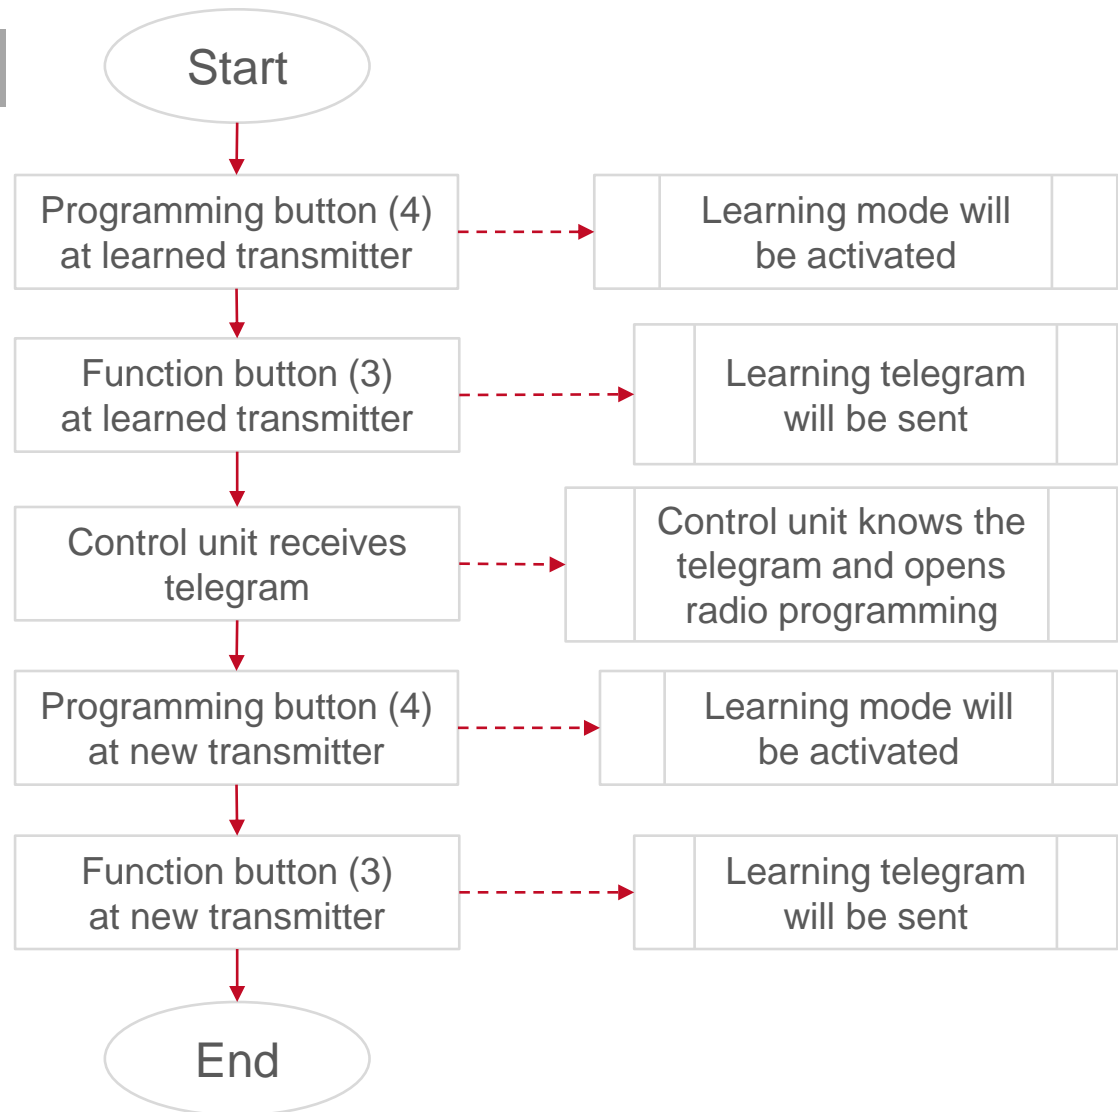 





Door position request

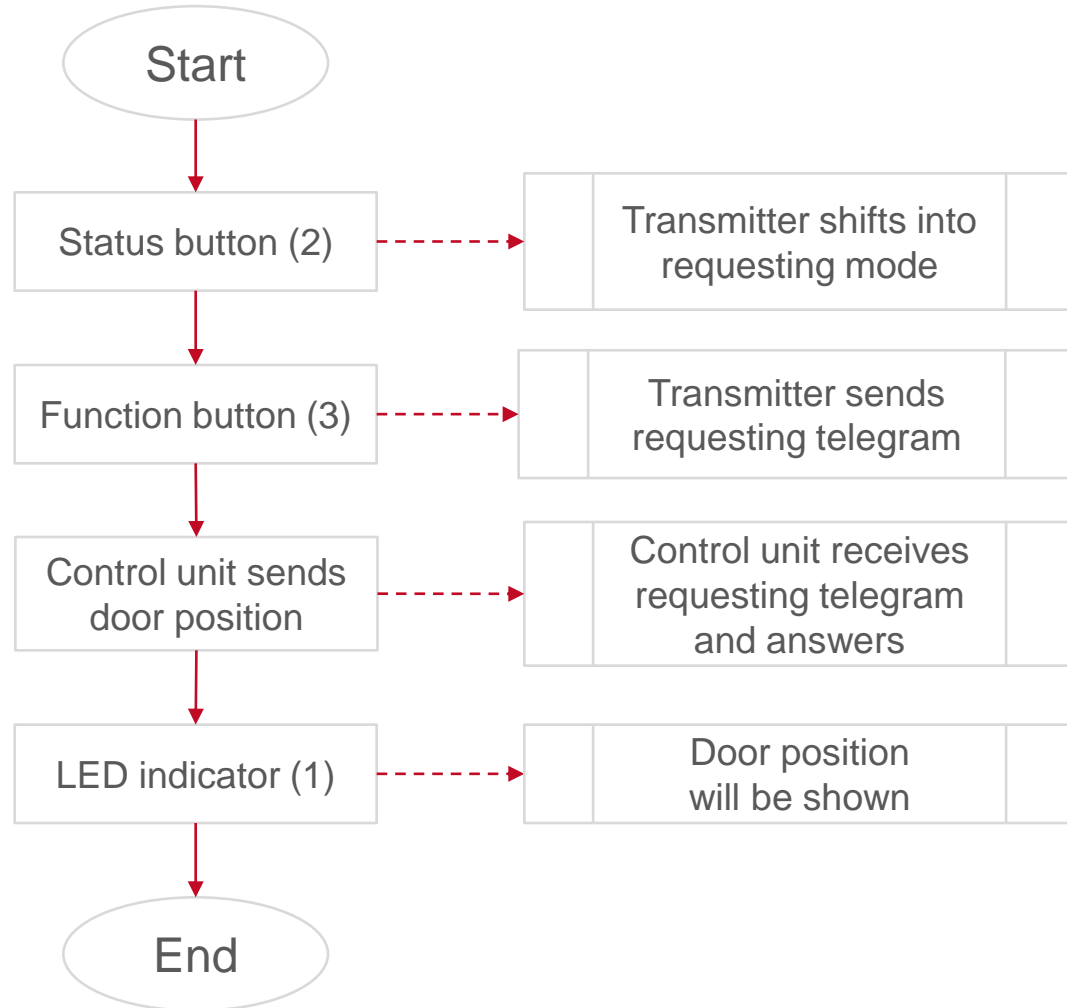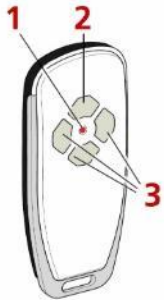 


## Door position request | LED indication

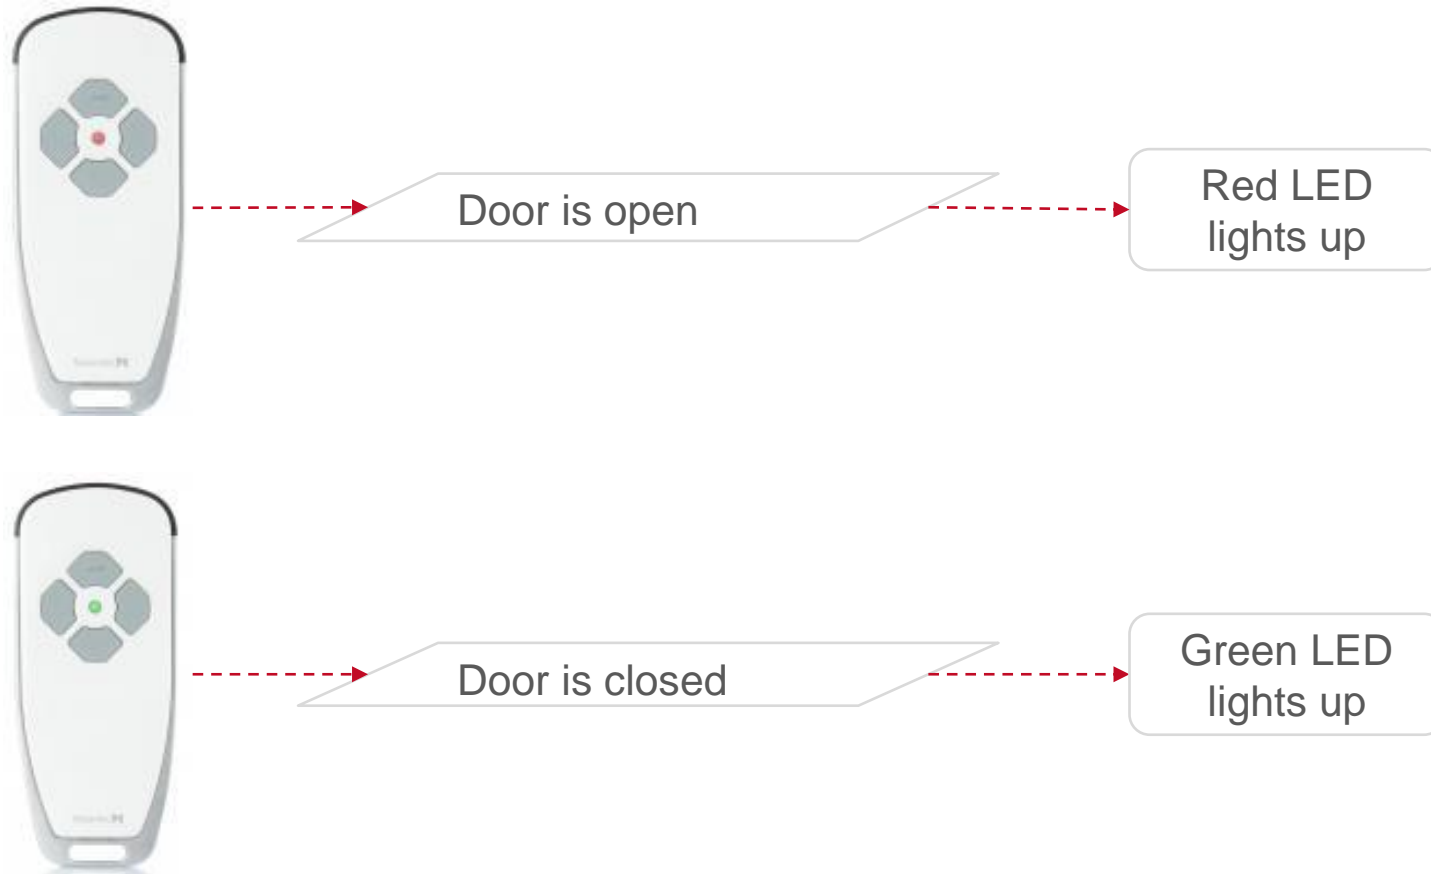 



## Door position request | LED indication

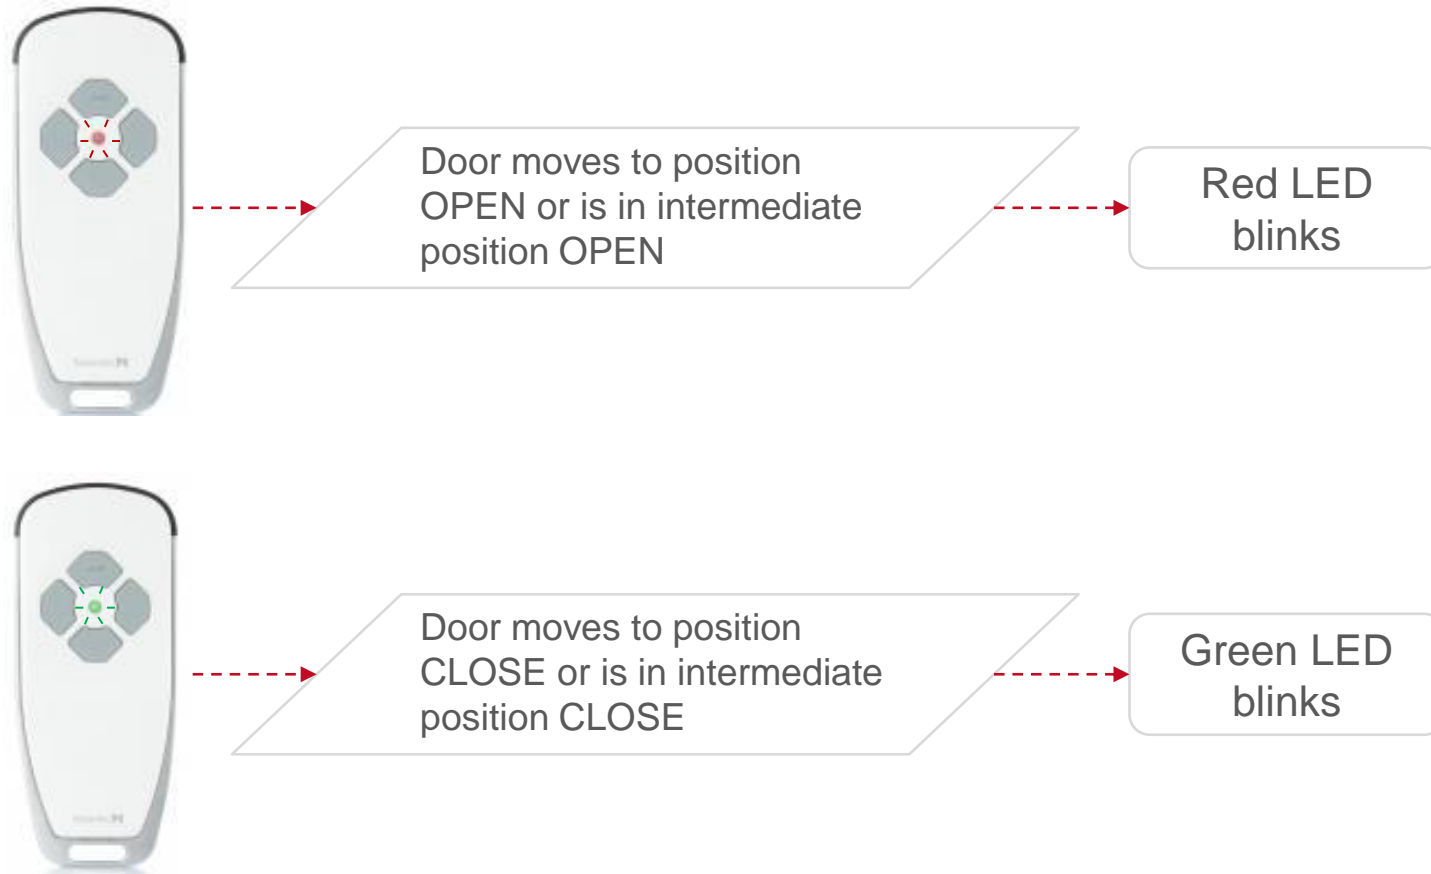 


Radio programming

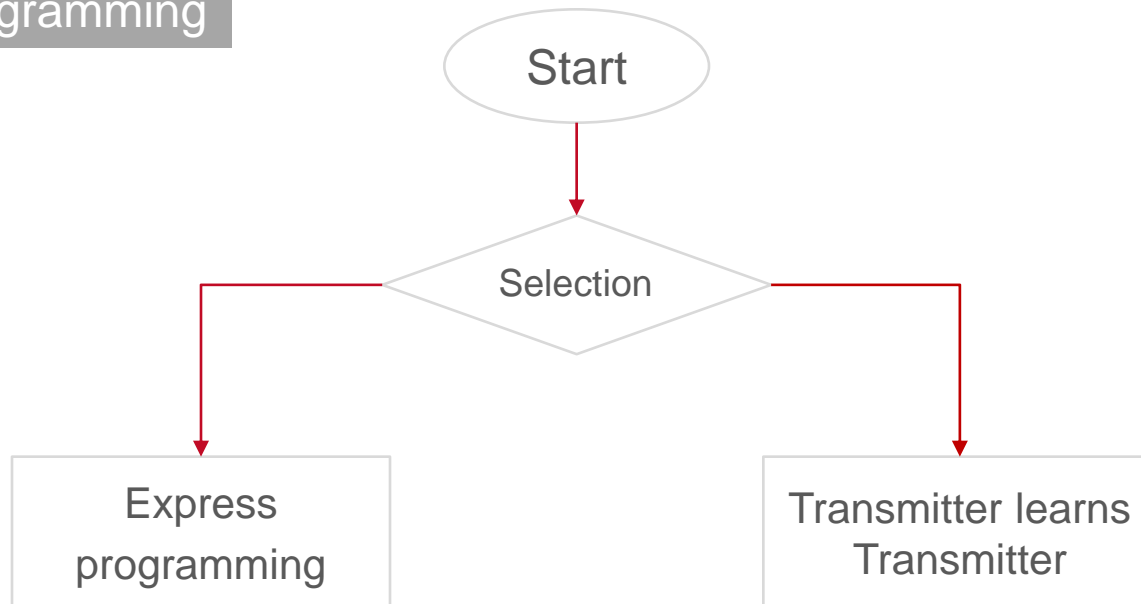 



Radio | Express programming

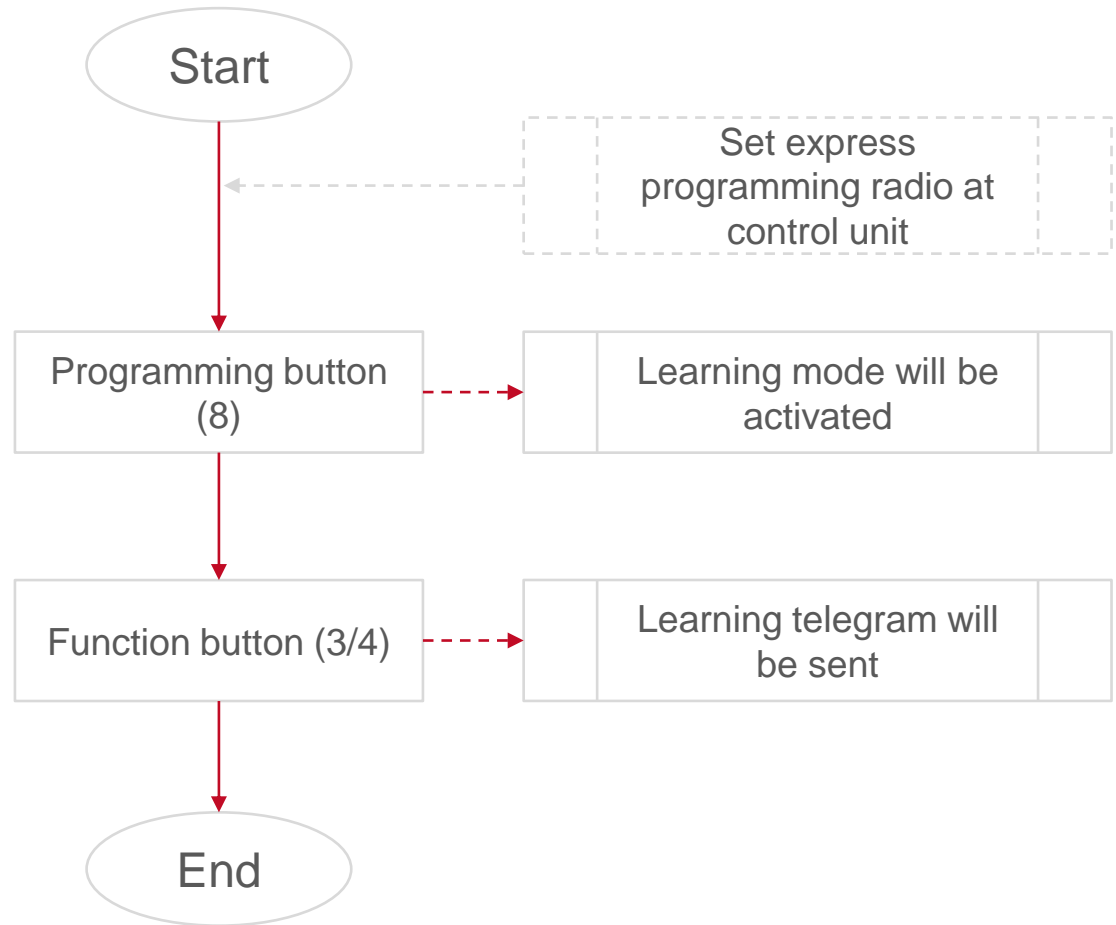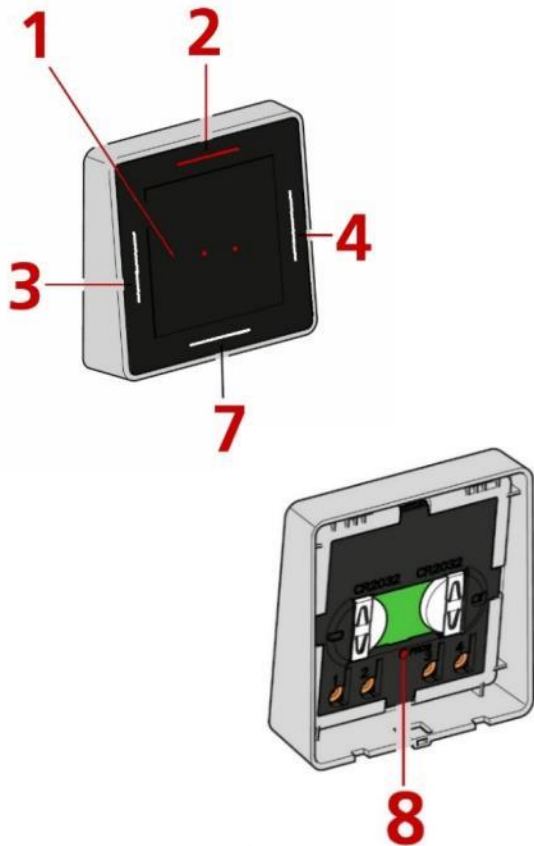 



Radio | Transmitter learns  
Transmitter

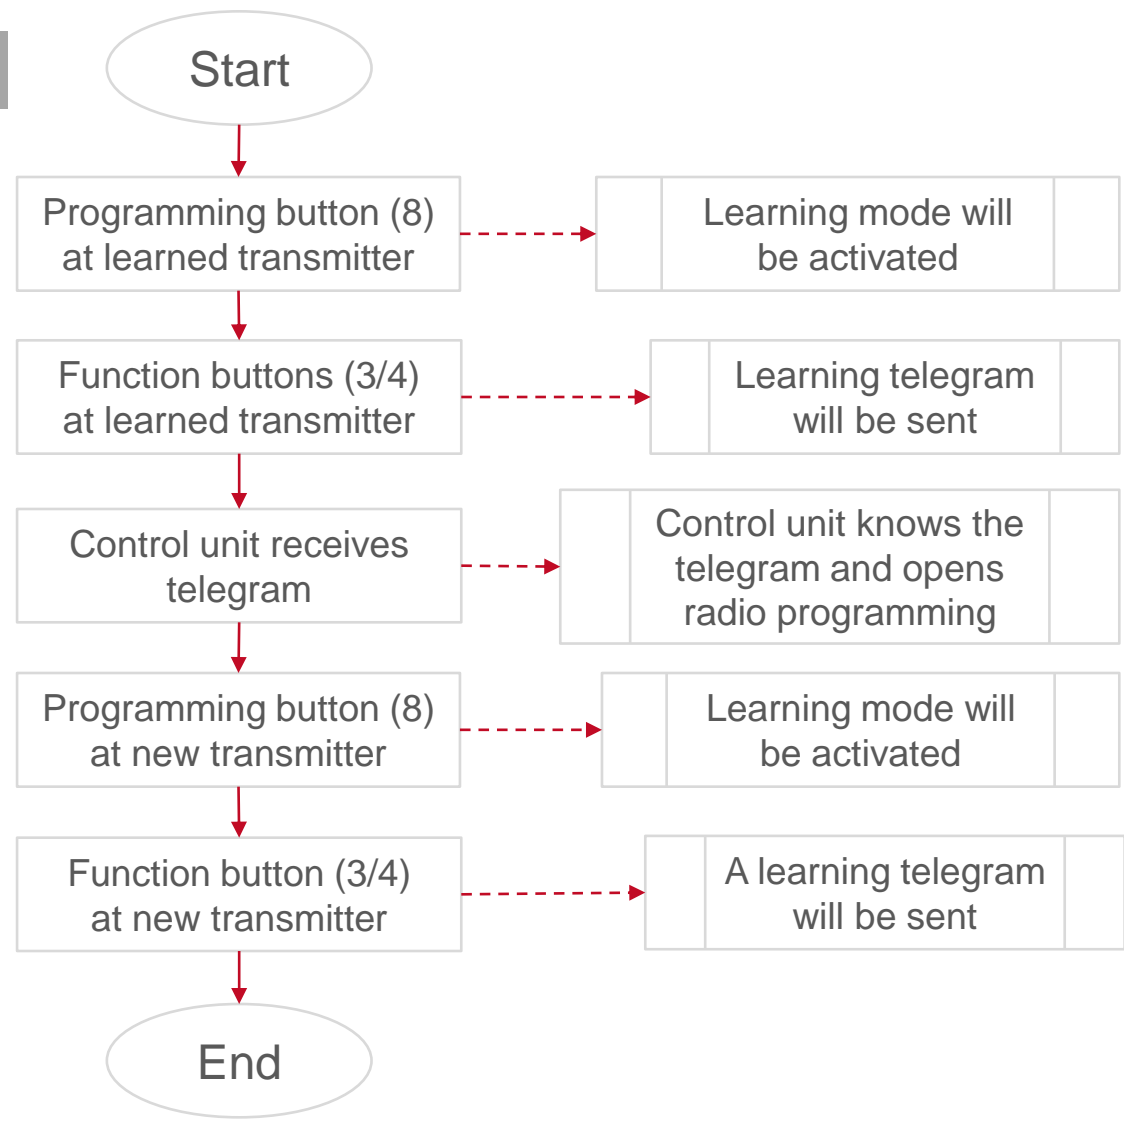 

## Holiday mode

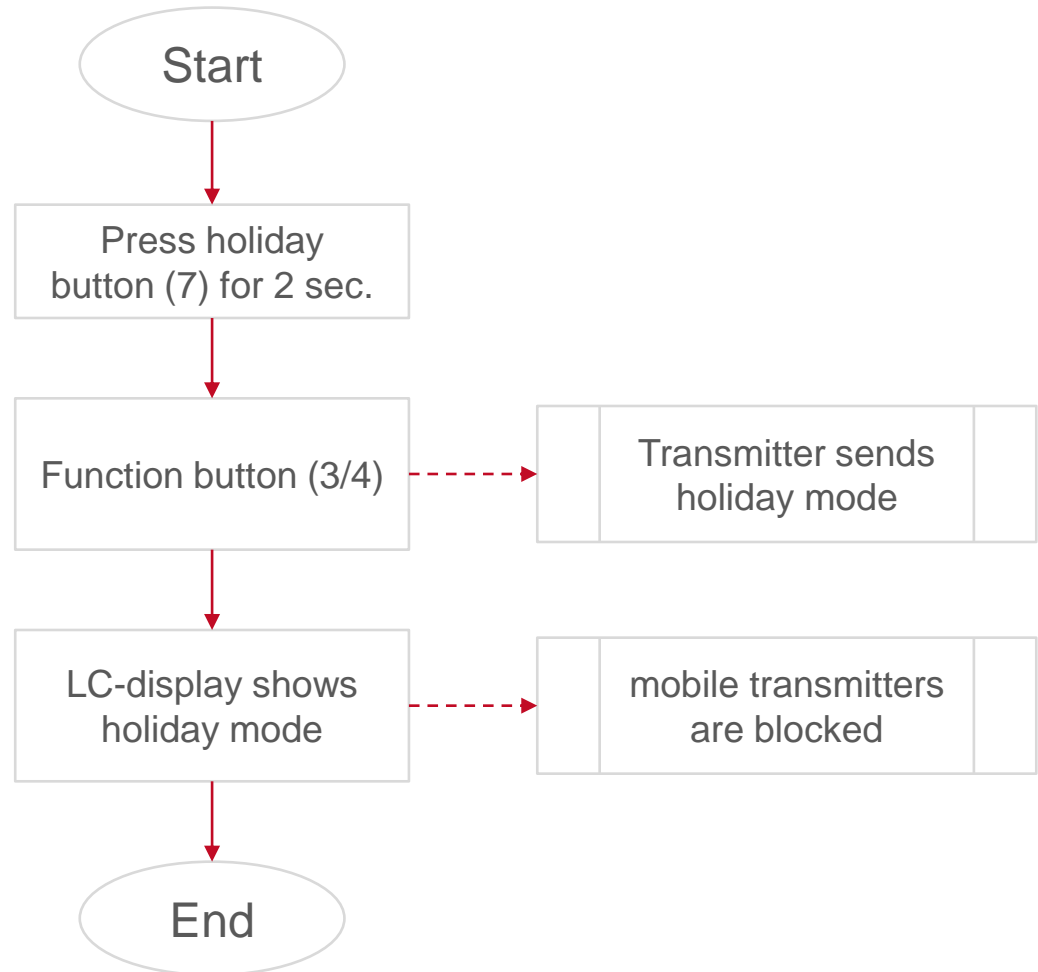 
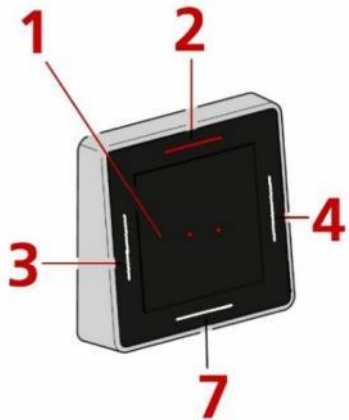


## Door position request (Digital 644)

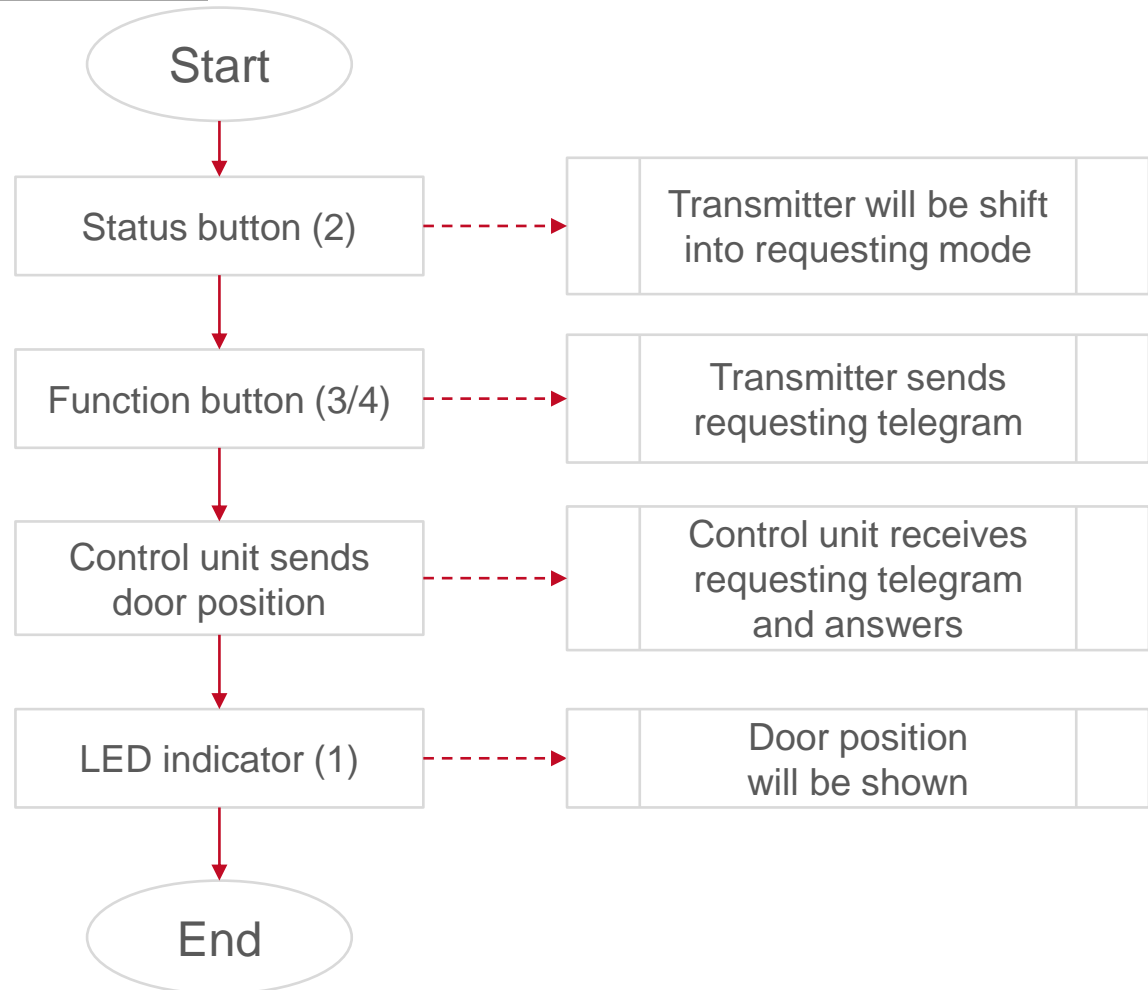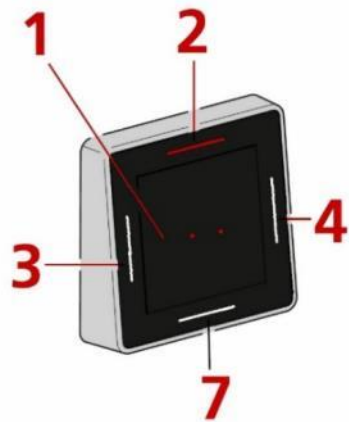 





## Door position request (Digital 644) | LED indication

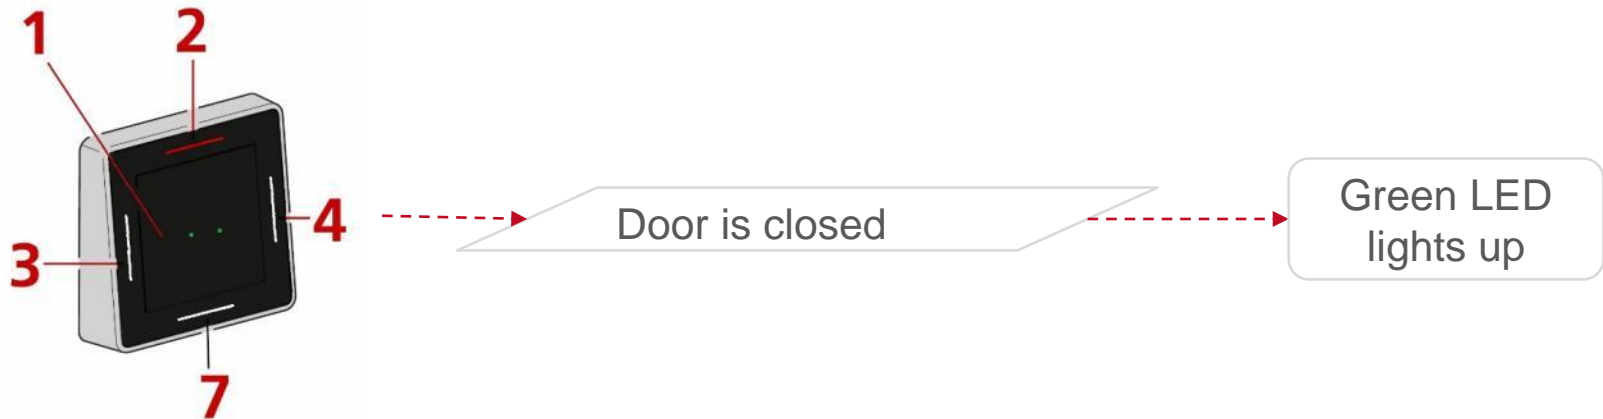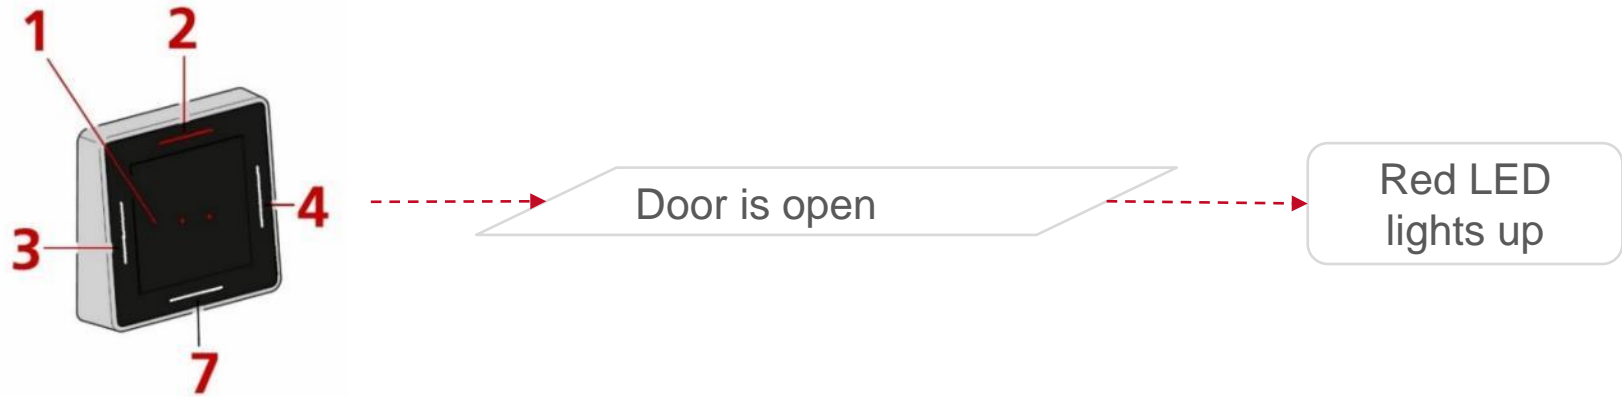

## Door position request (Digital 644) | LED indication


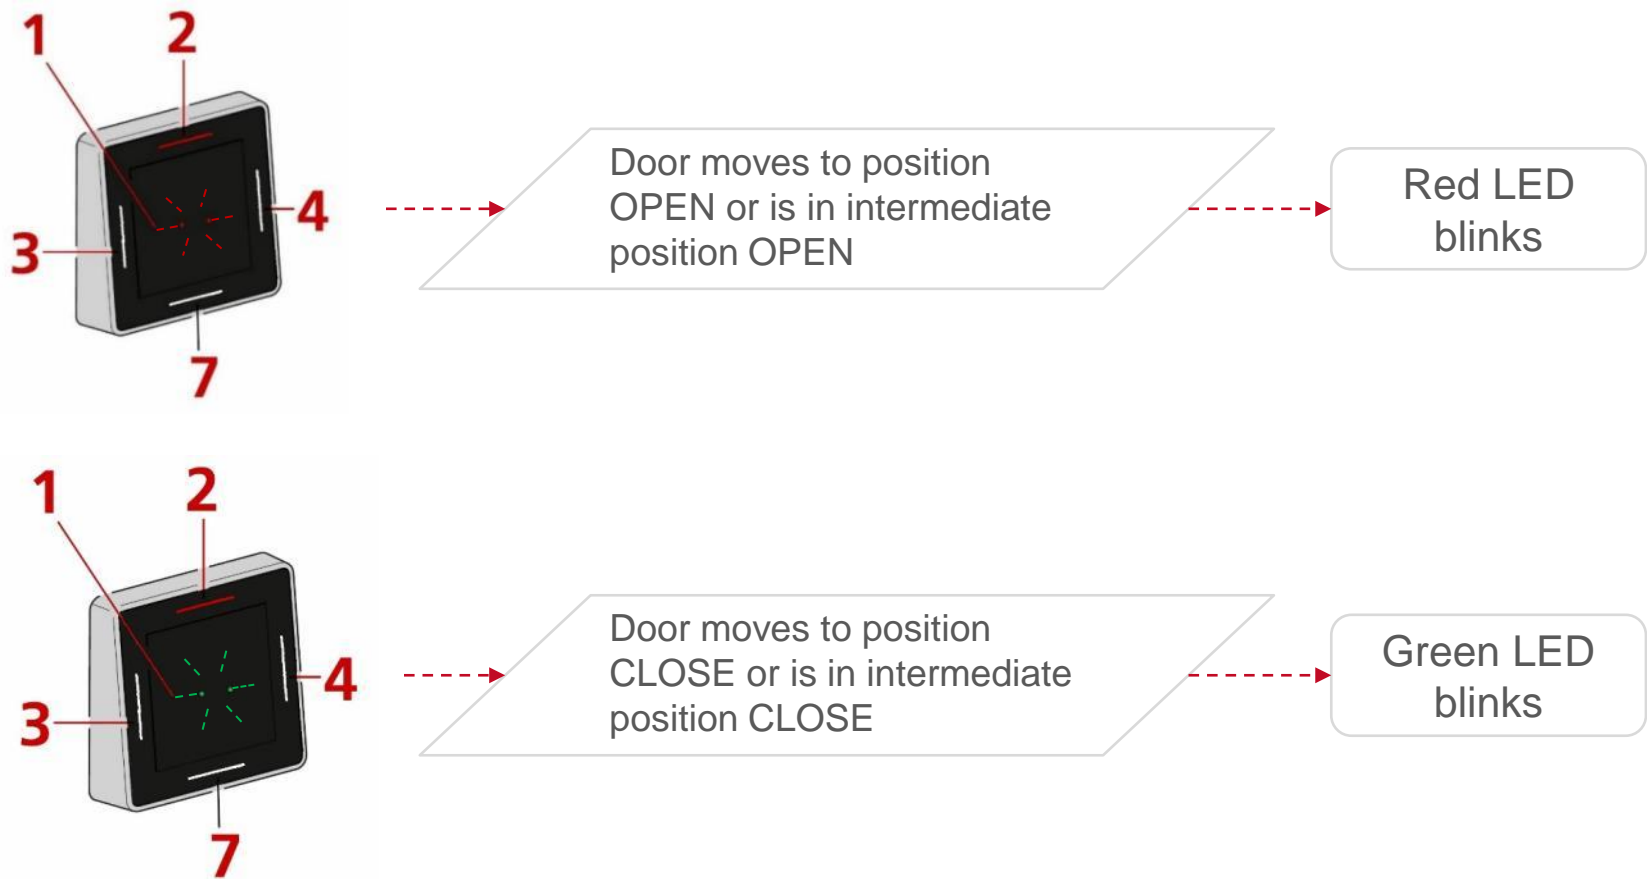 


### Programming lighting function (Digital 645)

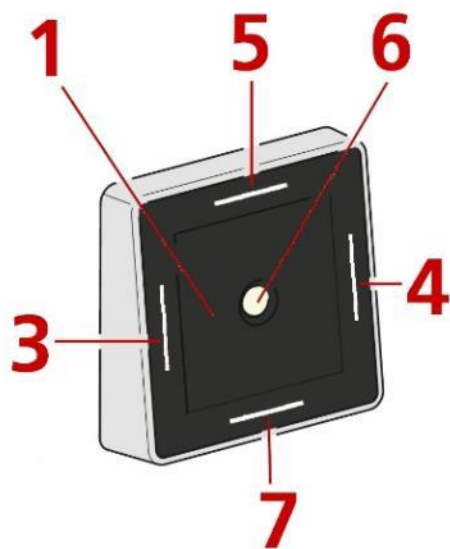


- › The wall control Digital 645 has got a motion detector, which activates the opener lighting
- › At delivery the opener lighting is set to 180 seconds
- › The motion detector is programmed on the left function button (3) at delivery
- › After triggering the motion detector, it is inactive for 180 seconds (energy-saving)
- › Notice: the opener lighting should not be set to a value shorter than 180 seconds




## Light button (Digital 645)

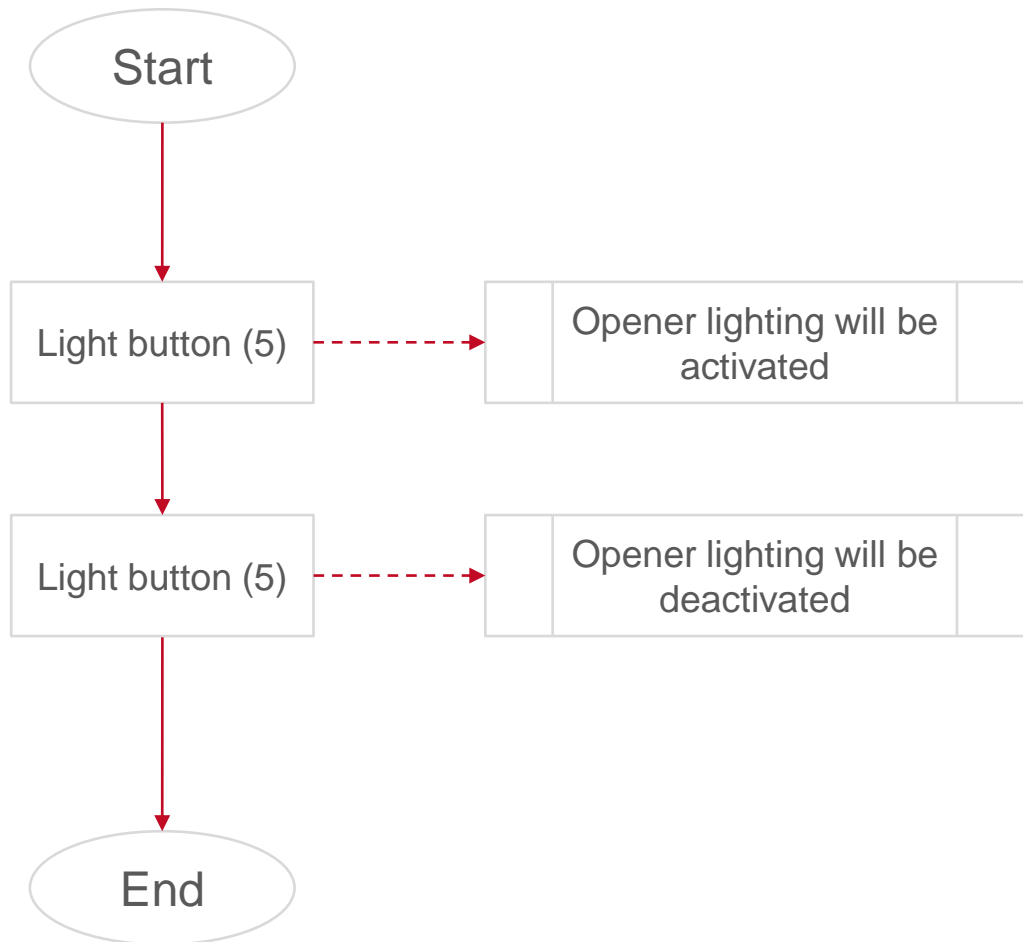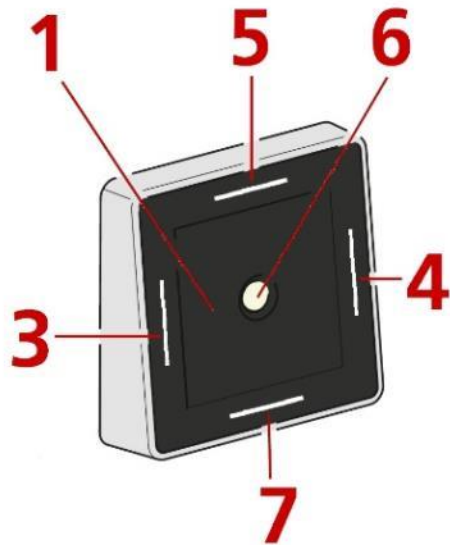 



## Conventional cabling external push buttons

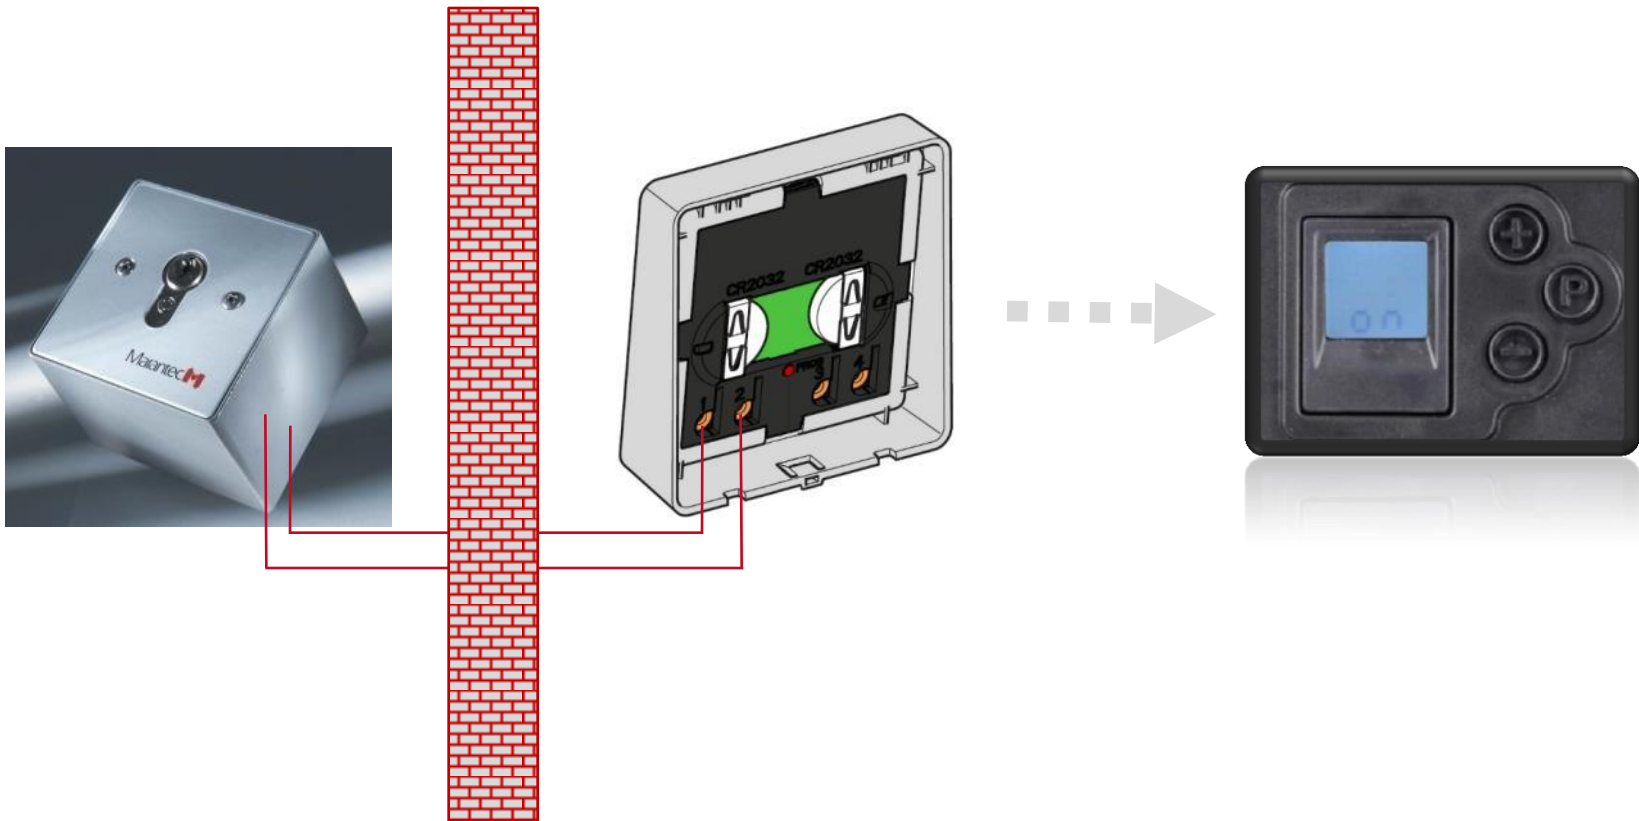



Function overview radio code keypad

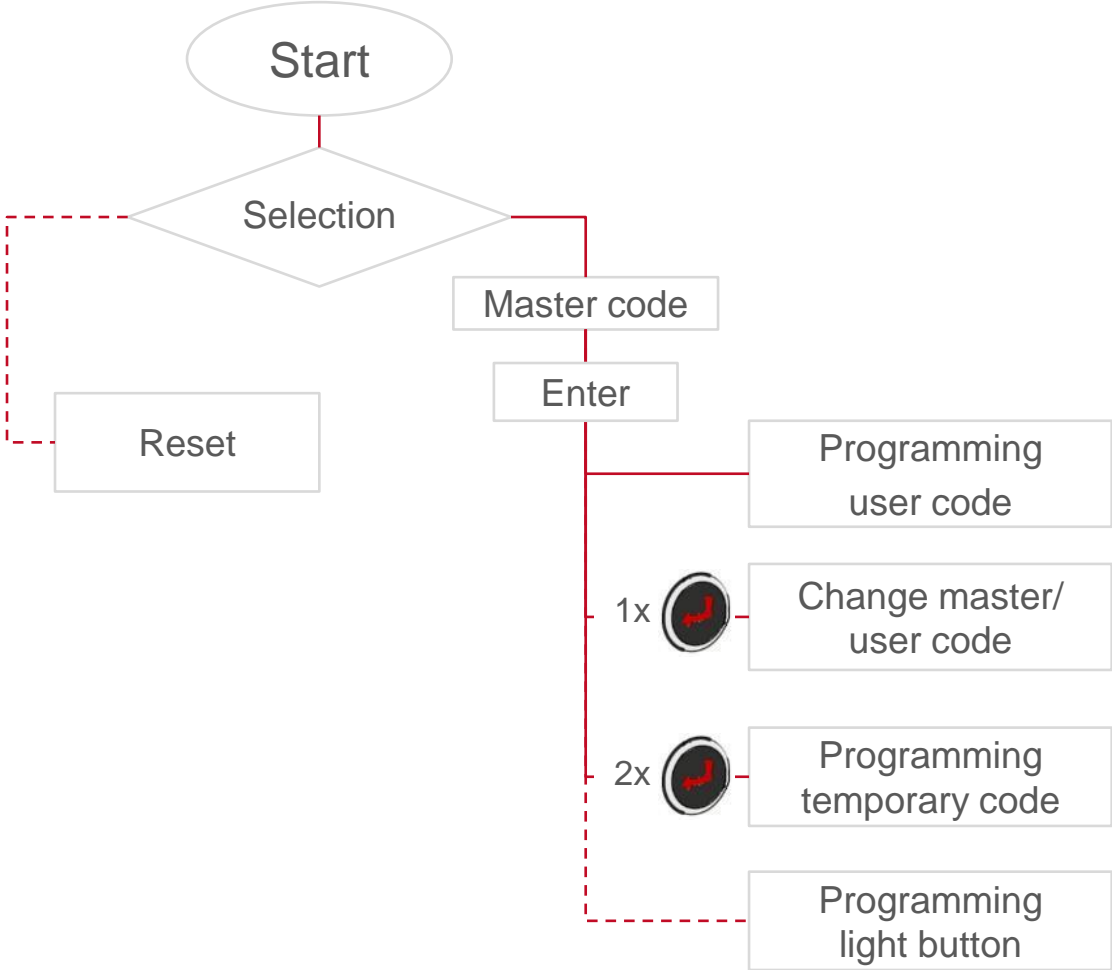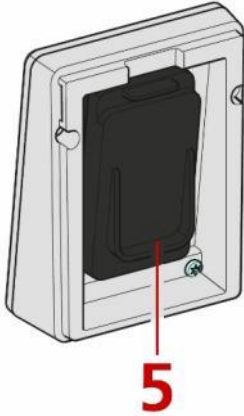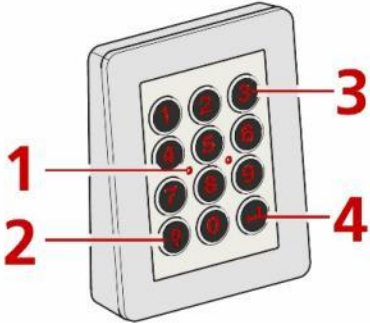 

## Programming user code

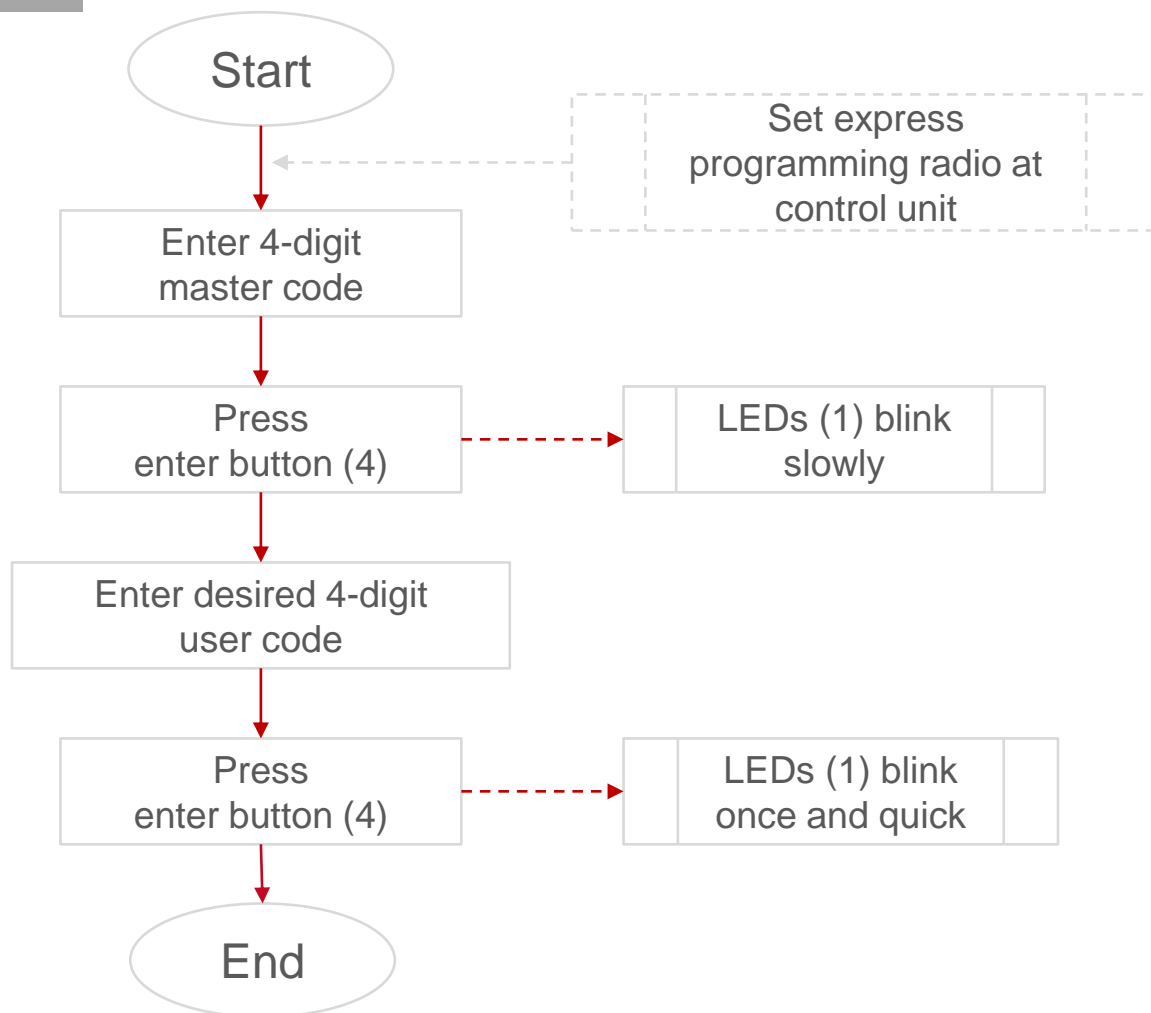 
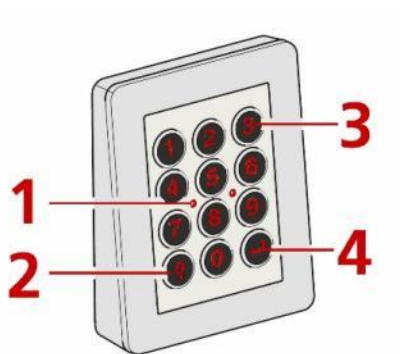


## Changing master / user code

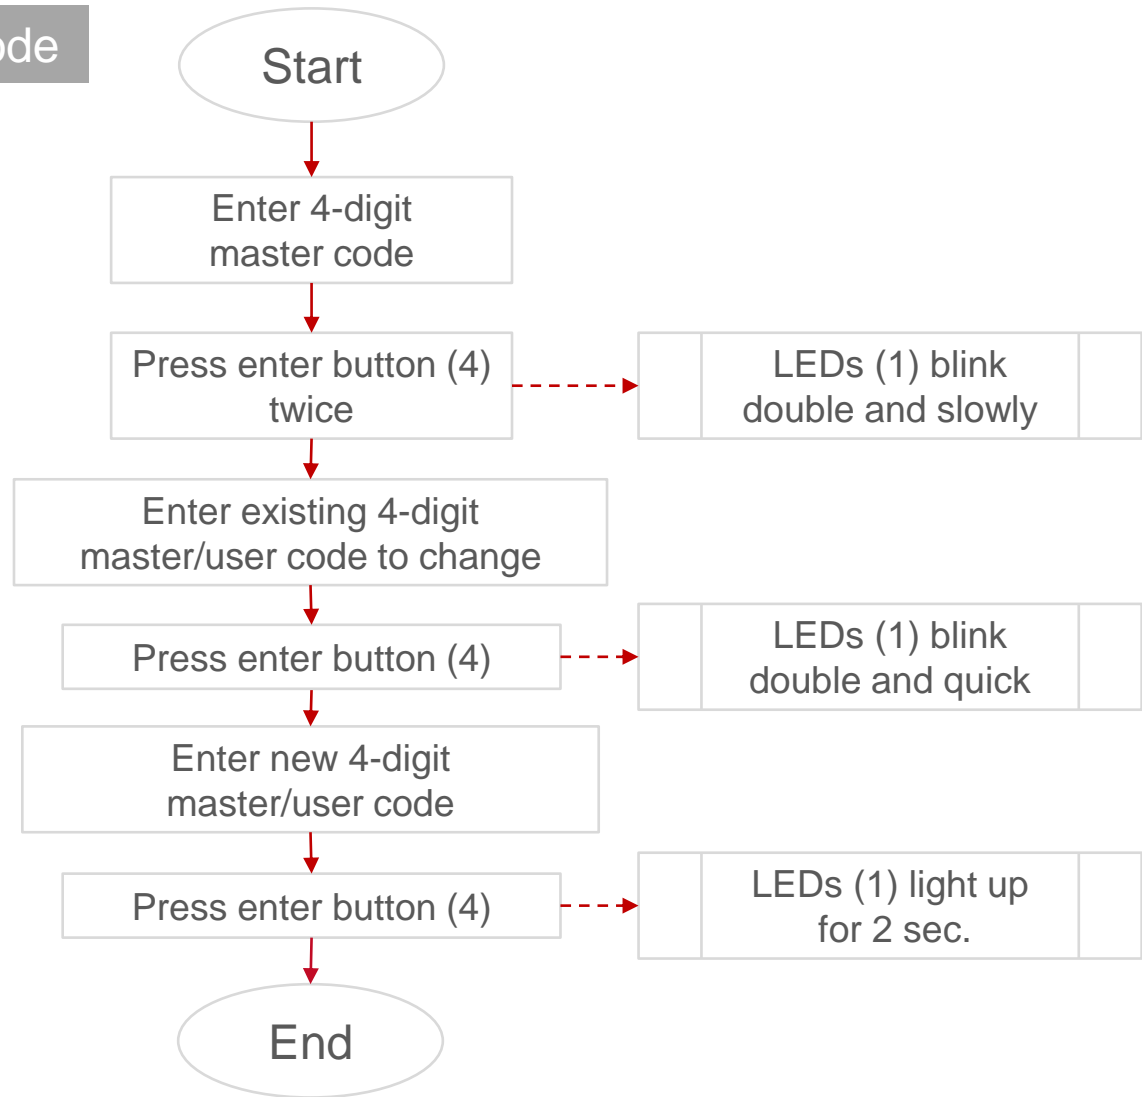
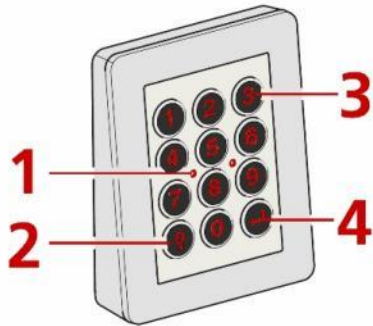






## Programming temporary code

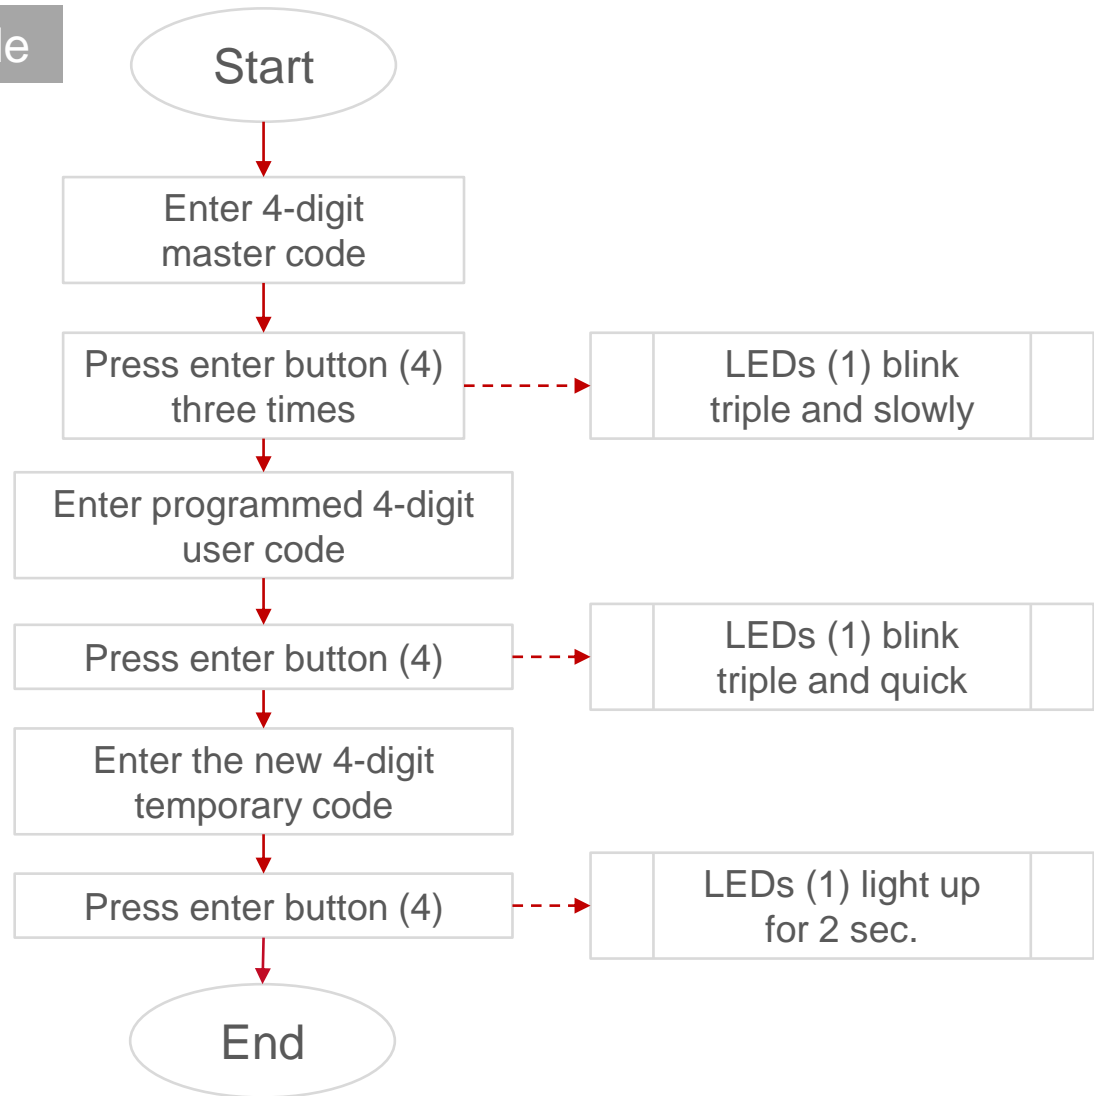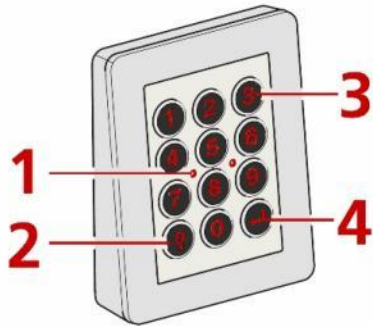 




## Programming light function

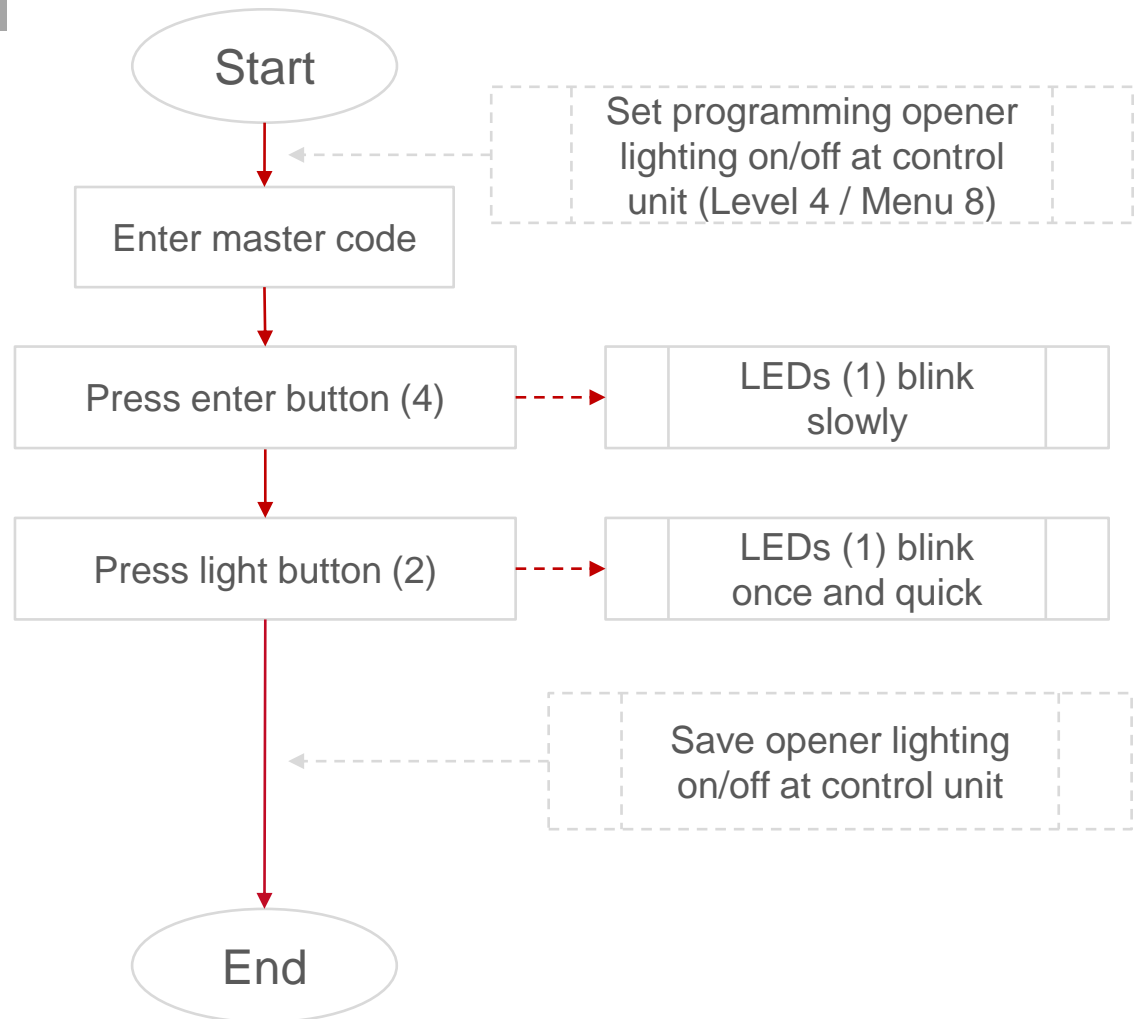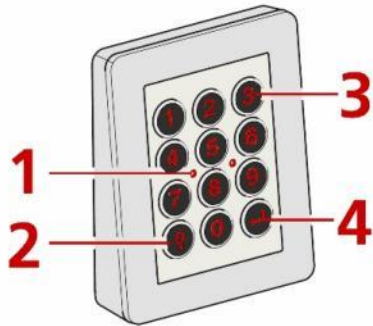 


## Light button

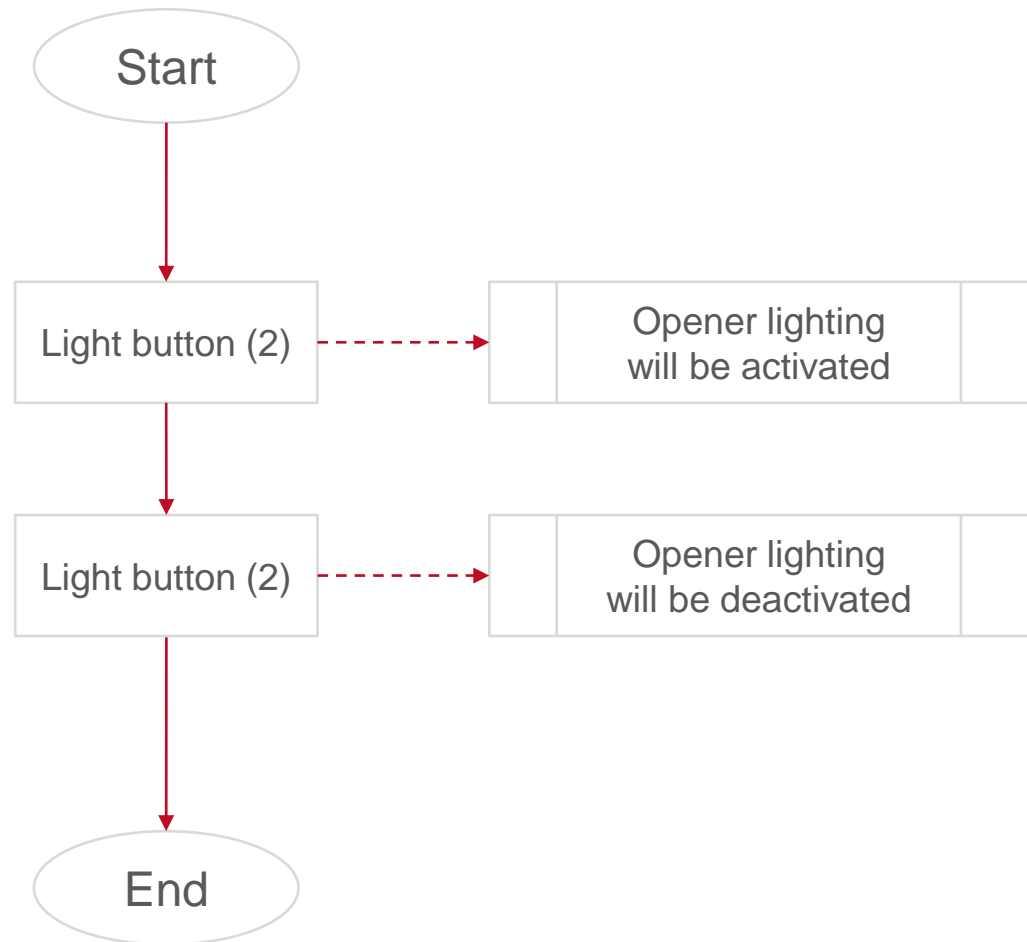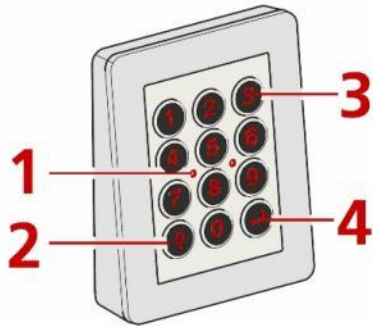 



## Reset

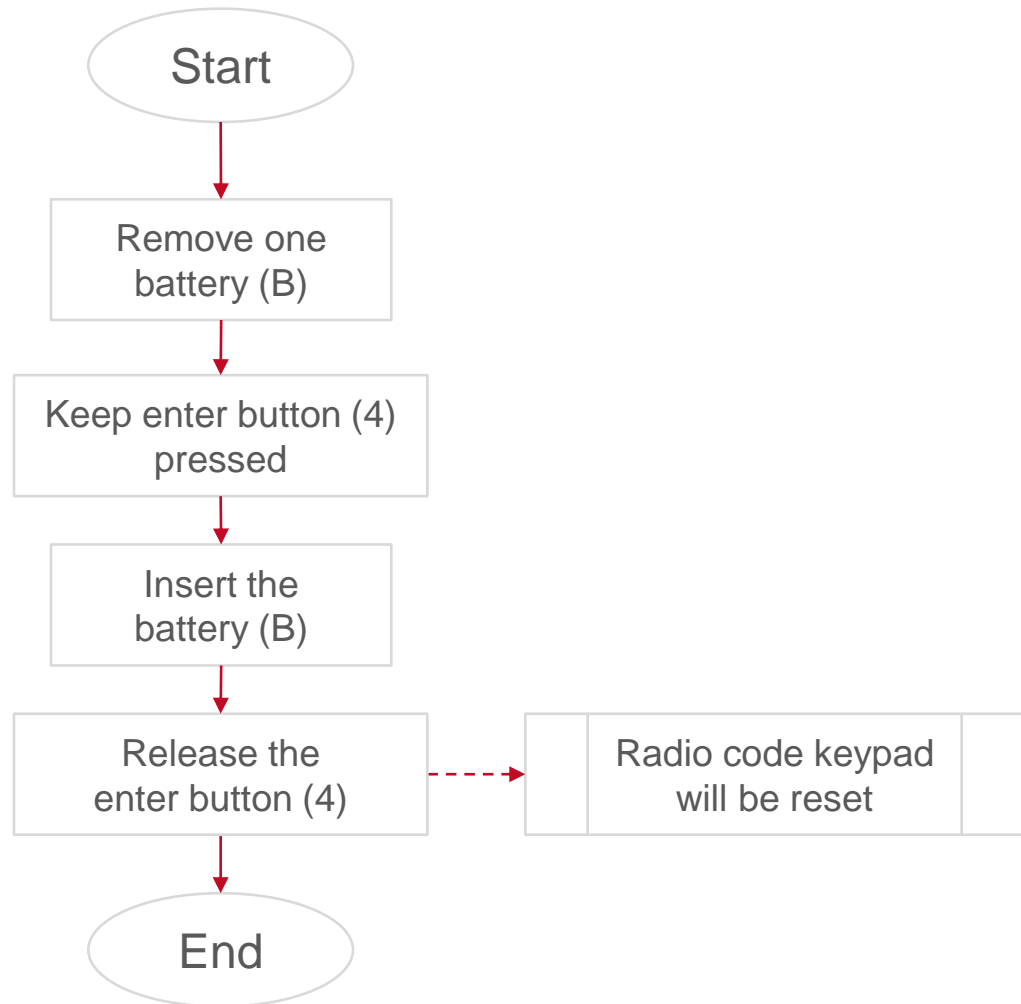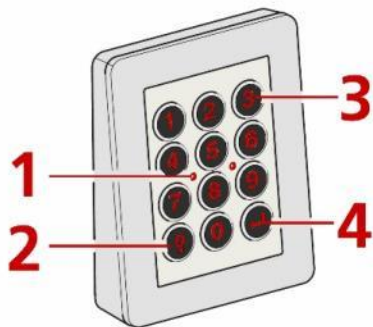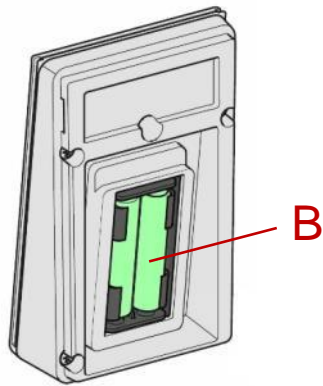  



## Functional diagram radio fingerprint reader

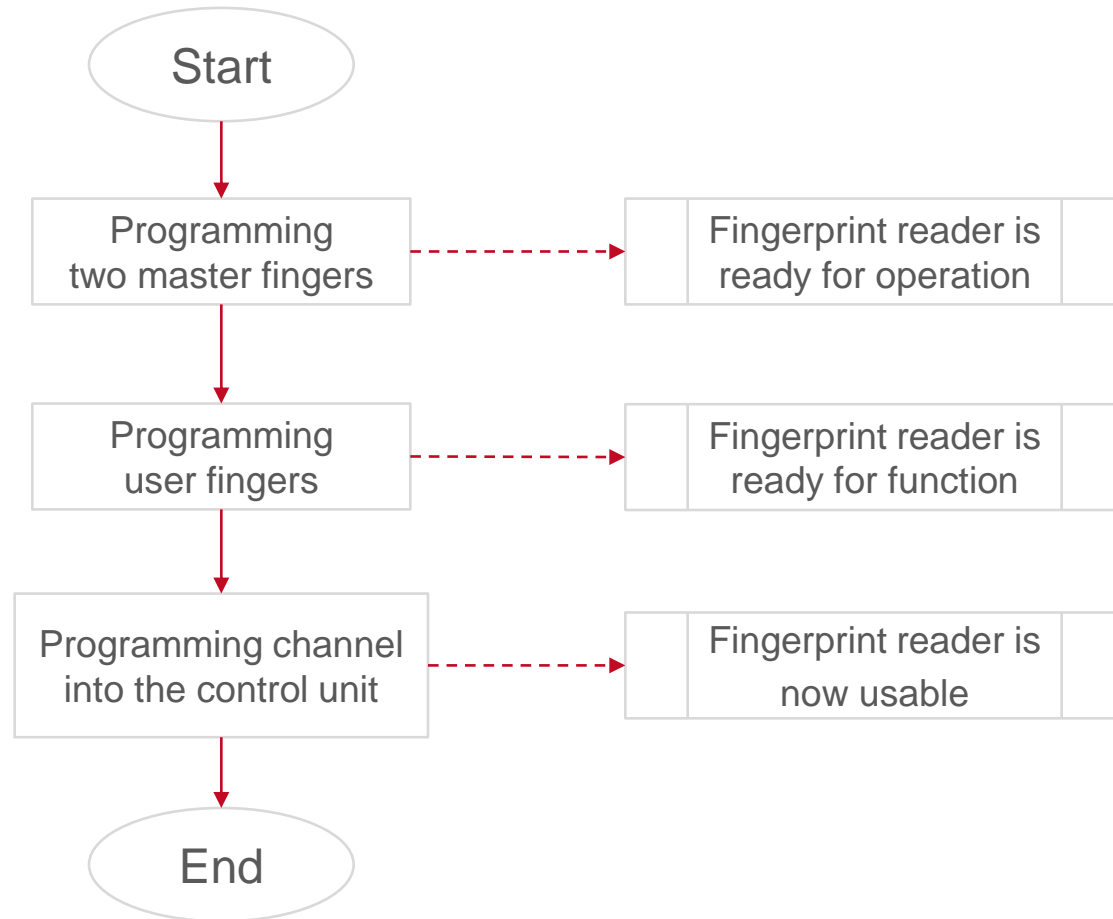 




## Programming | Master fingers

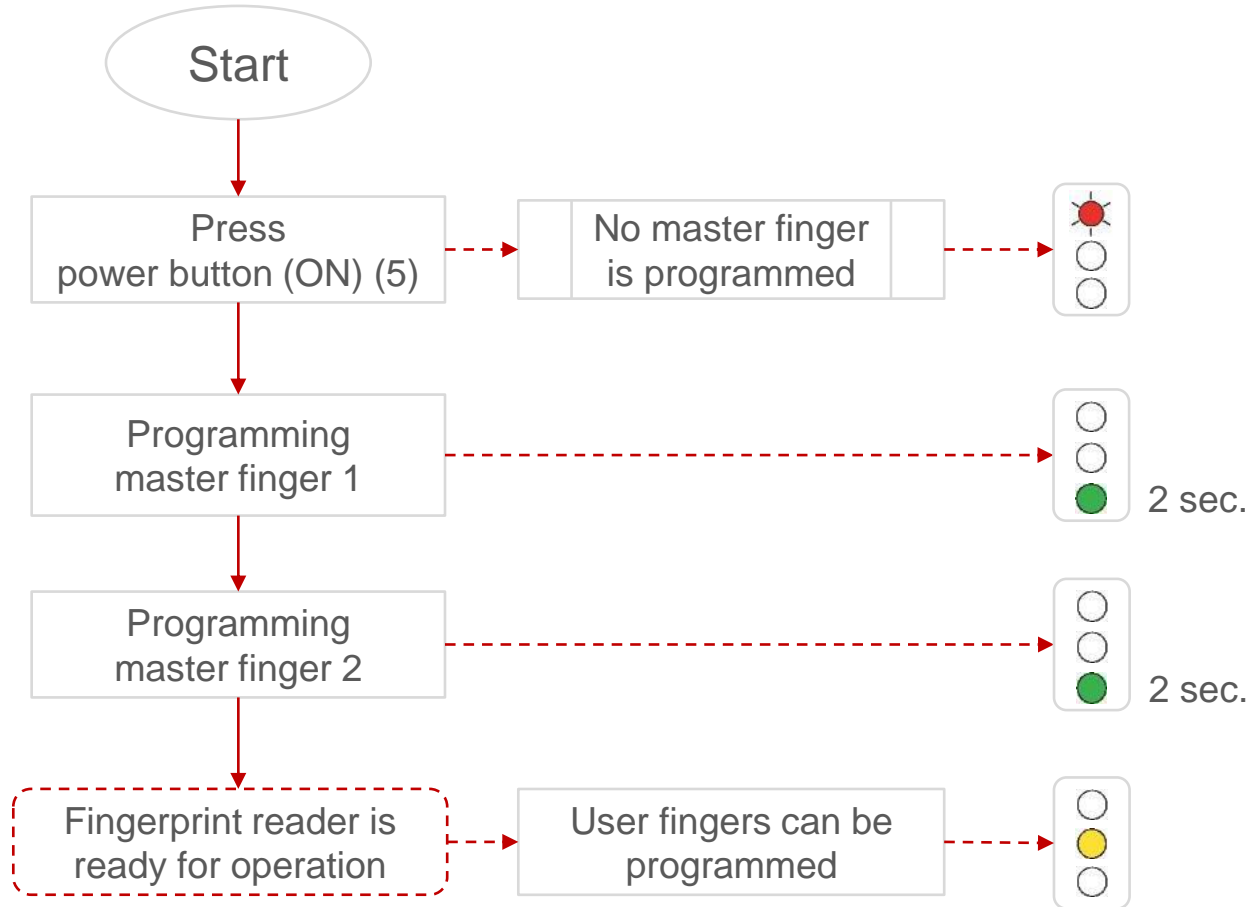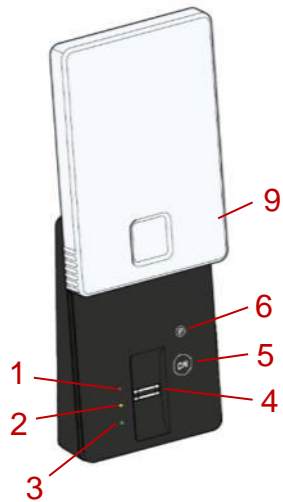 

## Programming | User-fingers

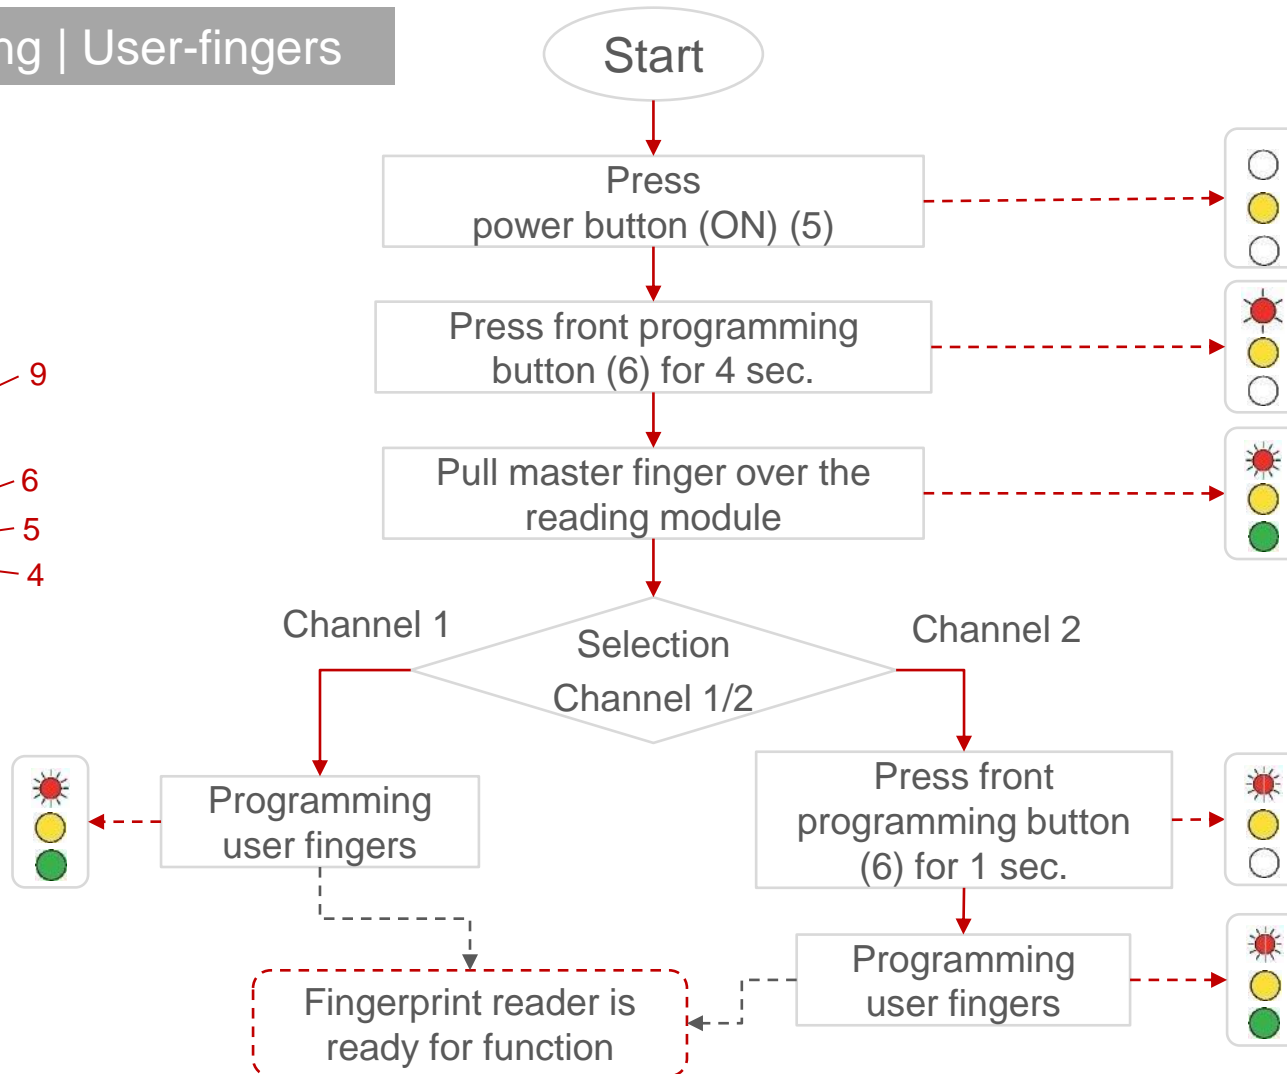 
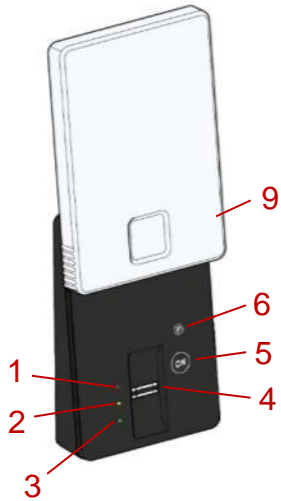


## Programming | Fingerprint reader

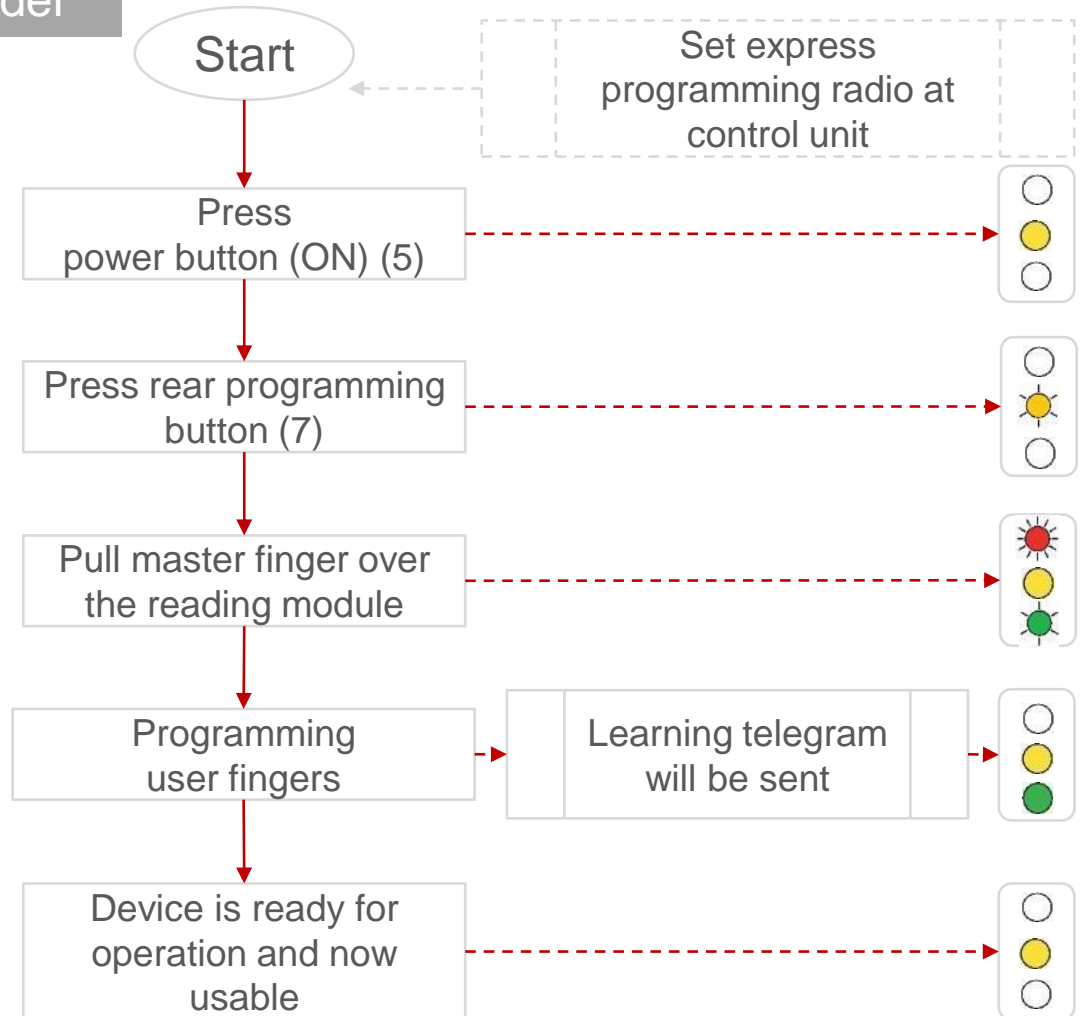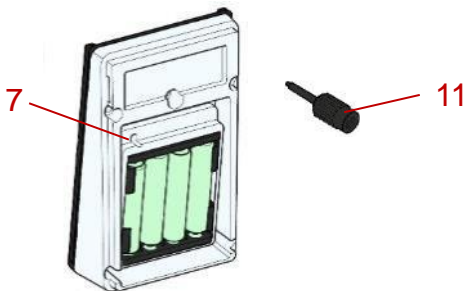 
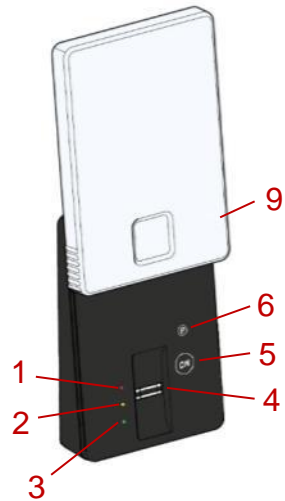







## Trigger function

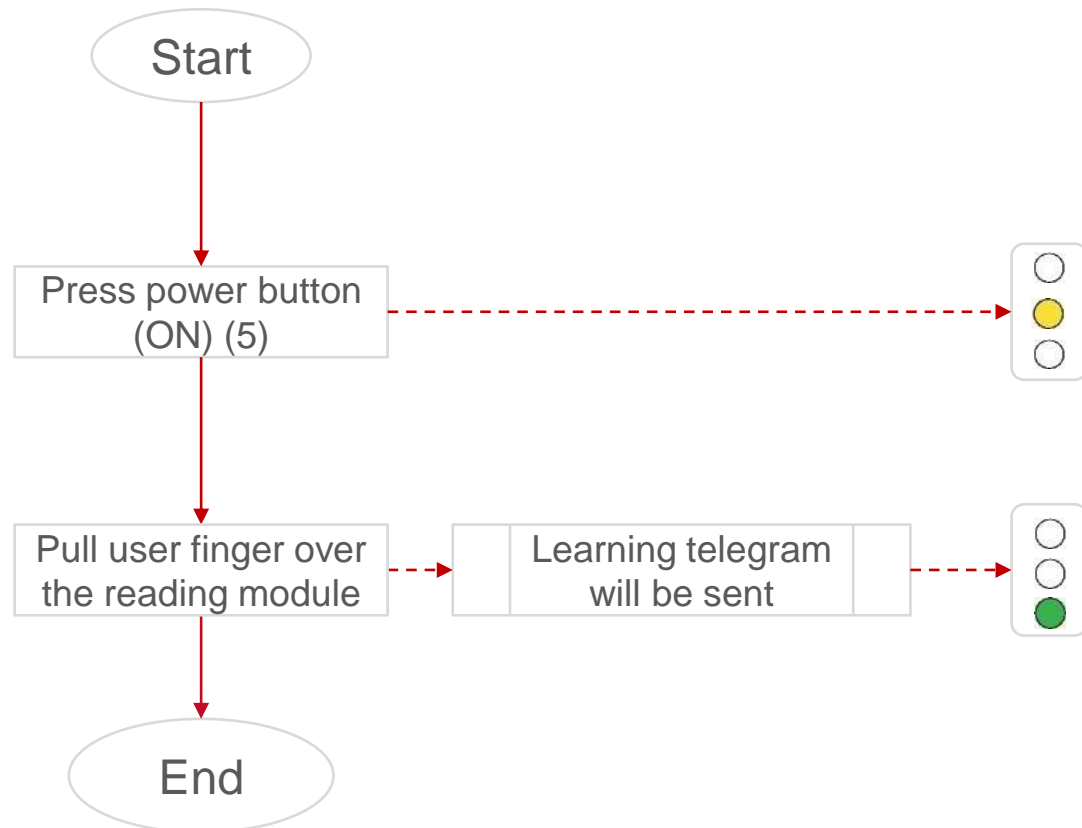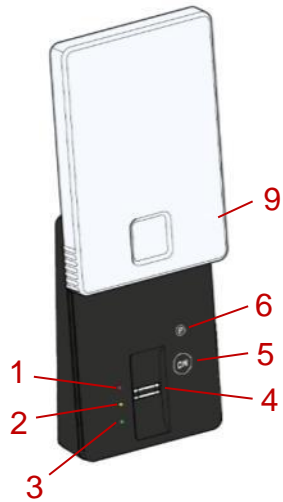 

## Delete user finger

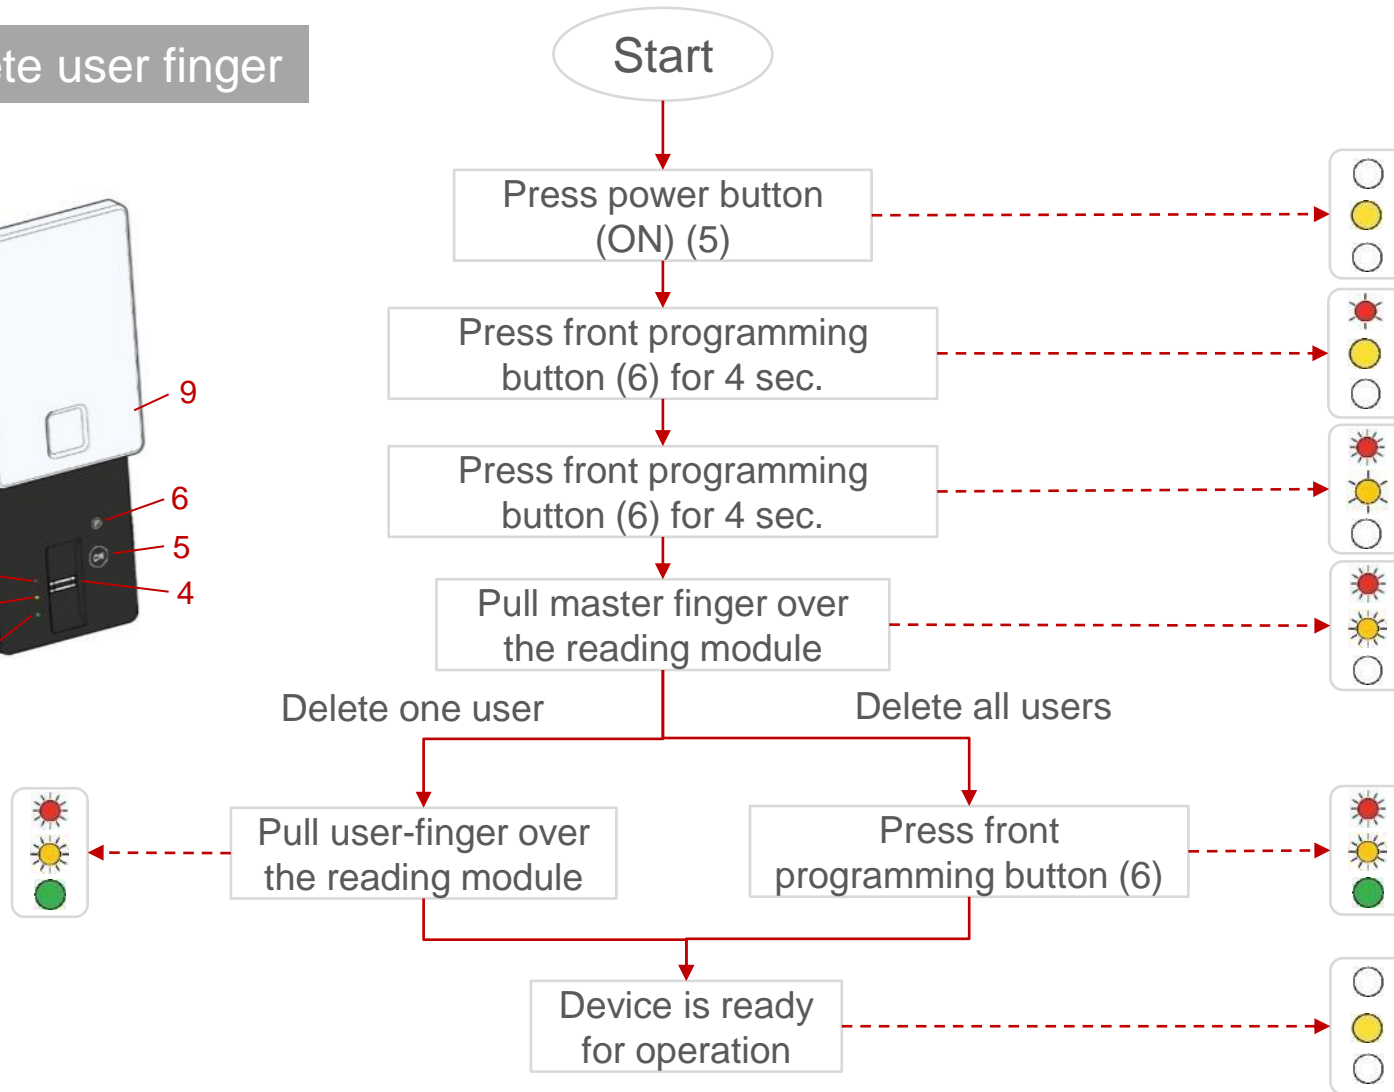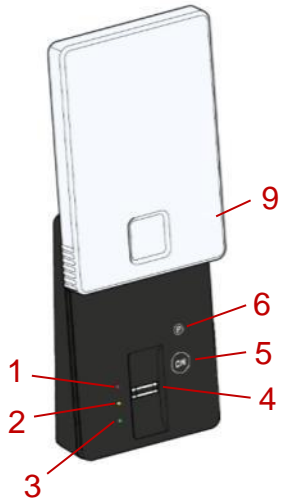 

## Reset

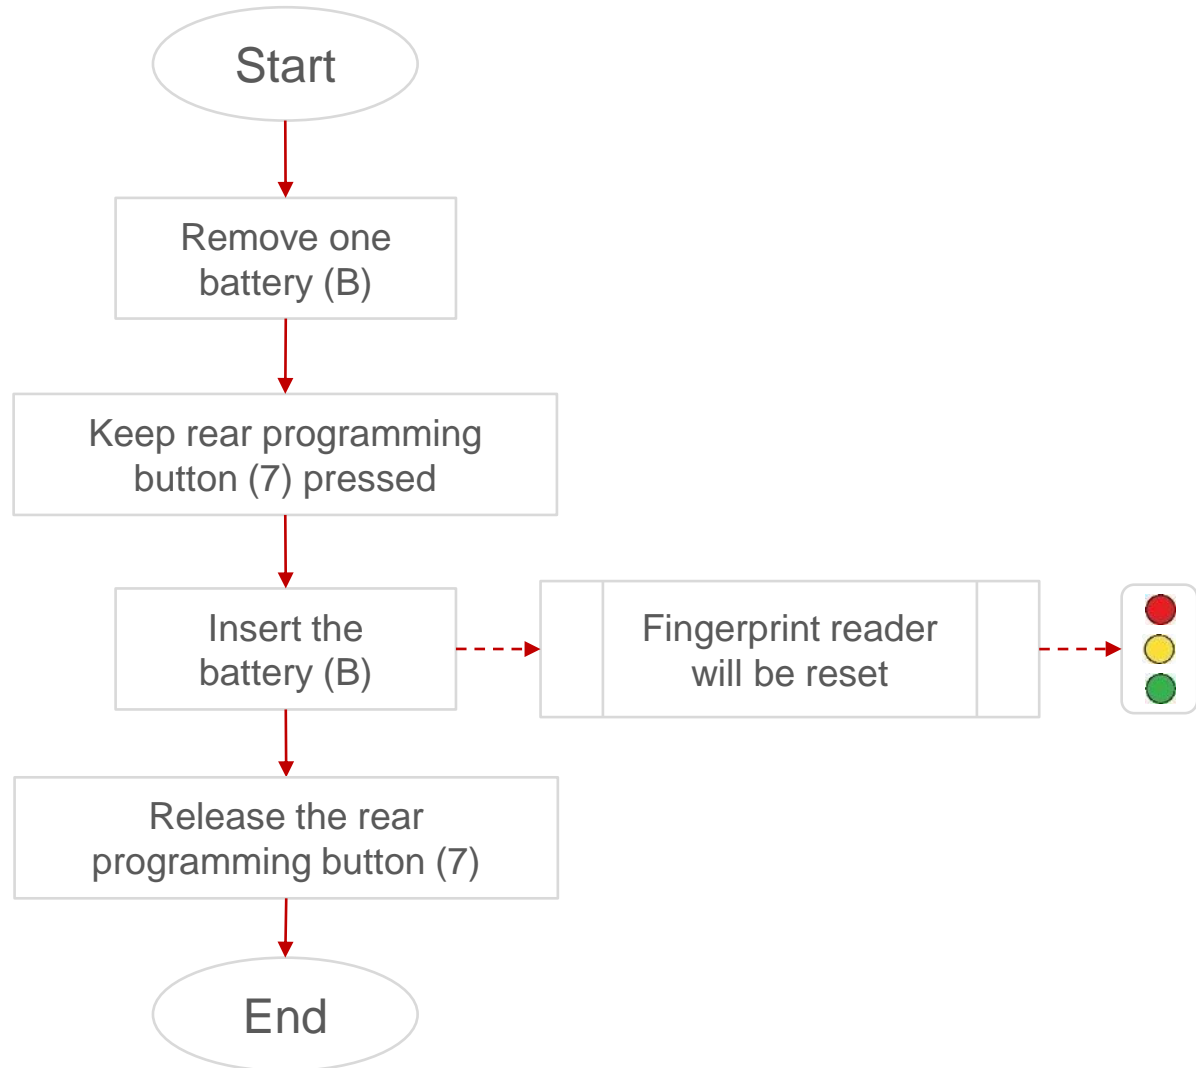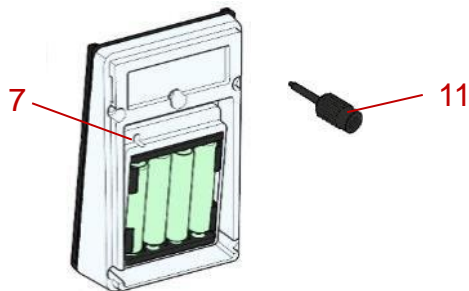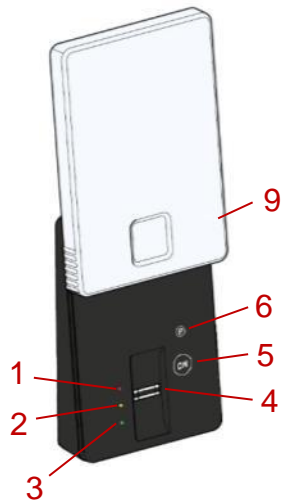 

Have you any questions about **bi-linked**?

Thank you very much  
for your attention.